



FCC Compliance Statement

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and may cause harmful interference to radio communications if not installed and used in accordance with the instructions. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet that is on a different circuit from the GPS unit.
- Consult the dealer or an experienced radio/TV technician for help.

When using the device, ensure that the antenna of the device is at least 20 cm away from all persons.

IC Compliance Statement

This device complies with Part 15 of the FCC Rules and Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions:

1. This device may not cause interference, and
2. This device must accept any interference, including interference that may cause undesired operation of the device.

This Class B digital apparatus complies with Canadian ICES-003.

IC Caution

Intentional or unintentional changes or modifications to the equipment not expressly approved by Rand McNally could void the user's authority to operate the equipment.

IC attestation de conformité

Ce dispositif est conforme à la norme FCC Partie 15 et aux norme(s) RSS permis-exempte(s) d'Industrie Canada. L'opération est soumise aux deux conditions suivantes:

3. Ce dispositif ne peut pas provoquer d'interférence nocive et
4. Ce dispositif doit accepter toute interference reçue, y compris les interférences qui peuvent causer un mauvais fonctionnement du dispositif.

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

Attention

Les changements ou modifications à l'équipement, que ce soient intentionnelles ou non, non expressément approuvés par Rand McNally pourraient annuler l'autorisation de l'utilisateur à utiliser cet équipement.

IC: 10199A-01001A

About GPS

The Global Positioning System (GPS) is a constellation of satellites that a GPS receiver uses to calculate geographical positions. To determine a position, data from at least three satellites is required. To determine elevation, the data from four or more satellites is required. Accuracy of the positioning varies from 10 feet to several hundred feet, depending on vehicle placement and the surrounding environment.

Geographical terrain (such as mountains), man-made structures (such as highway overpasses, bridges, and tall buildings), as well as weather can interfere with the GPS signal. For best GPS reception, position the device and mount with a clear line of sight to the sky. Some vehicles may have a limited view of the sky due to metal sun shields or a metallized windshield coating.

Map data includes the geographical coordinates for address locations and points of interest (POIs). With GPS reception, your device calculates a route to your selected location.

Customer Support

Call toll-free:
800-333-0136

Service hours:
Monday through Friday, 7 a.m. to 6 p.m. CT
(Except official holidays)

E-mail:
RVNDSupport@randmcnally.com

1. Your Device	1-3	D. Maps & Routing	39-45
Safety Information	1	Route Map Window	39
What's Included	2	Exits Quick View	40
Install the Mount	2	Directions Slide-Out List	41
RV Tablet 80 hardware	3	Virtual Dashboard	42-43
2. Getting Started	4-9	Junction View, Turn View	44
Connecting to Wi-Fi	4	Location and Route Options	45
Registration	4	E. Tools & Features	46-57
Using Android	5	Weather	46
Settings	6-8	Traffic	47-48
Main Menu	9	Fuel Prices	49
3. RV GPS	10-57	RV Tools	50
A. Main Menu	11	Checklists	51
B. Settings	12-18	Maintenance	52
Guide to RV Tools and Device Preferences	12	Trails	53
RV Info	13	Fuel Logs	54
Warnings	14	Quick Planner	55
General Preferences	15-16	Road Atlas Information	56
Route Preferences	16-17	Calendar	57
Map Preferences	18	Notepad	57
C. Destinations	19-38	Unit Converter	57
Helpful Tips	20	Calculator	57
New Location	21-24	F. Tell Rand	58
Address Book	25-26	4. TripMaker®	59
Multi-Stop Trips	27-29	5. Road Atlas	60
Tap Map	30	6. Dash Cam	61
Avoid List	31	7. Preloaded Apps	62
Points of Interest (POIs)	32-35	8. Rand McNally Market	63
Local Search	36	9. More Information	64
Confirmation Windows	37		
Toll Costs, Route Compare	38		

Caution: Important Safety Information

Navigation

- Use this device at your own risk.
- Use this device only when it is safe to do so.
- Look at the display only when it is safe to do so.
- Traffic regulations always have priority over any instructions from the navigation system.
- Follow navigation system instructions only when local regulations and road traffic allow you do so.
- Make sure that the mount is securely mounted and properly adjusted before each trip.
- **Note:** If you do not understand the spoken instructions or are unsure of what to do next, refer to the navigation map on your navigation device.

Installation

- Make sure that the mount does not impair the driver's visibility.
- Do not attach the mount within the airbag deployment zone.
- When installing the mount, make sure that it does not pose a risk in the event of an accident.
- Do not run cables directly next to safety-relevant devices and power supplies.
- After installation, check all safety-relevant equipment.
- Connect the wall charger to a 120V or 240V outlet only.
- Connect the vehicle charger to a 12V outlet only.

Device

- Do not use sharp-edged objects on the device touch screen.
- The device is not waterproof and is not protected against water damage.
- Protect the device from extreme temperatures. Operating temperature for the device is between 32 degrees F and 120 degrees F.
- Do not open the navigation device casing.
- Do not attempt to replace the battery. Contact Rand McNally Customer Support with questions about the battery.
- Always follow local regulations when disposing of this device.
- **Note:** Make sure that there are no kinks in the cable and that it will not be damaged by any sharp objects.
- **Note:** Use only a moist cloth to clean the navigation device.
- **Note:** Do not pull the cable to unplug the unit.

What's Included

Rand McNally RV Tablet 80

- Two-piece mount:
 - Magnet with GPS boost
 - Bracket with suction cup
- Quick Start Guide
- Anti-glare screen protector
- Vehicle charger
- Wall charger
- USB cable


Install the Mount


Note: Follow all local regulations governing the placement of the mount.

1. Select an area with a line of sight to the sky and GPS satellites.
2. Clean and dry the mounting area.
3. Remove the suction cup protective film.
4. Attach the two pieces of the mount together and lock into place.
5. Adjust the angle of the mount.
6. Pull the suction cup lever up to release suction.
7. Plug the power cord into the mount and the vehicle's 12-volt power source.
8. Place and hold the mount suction cup against the mounting surface.
9. Press the suction cup lever down until it snaps into place.
10. Snap the tablet onto the mount.
11. Adjust the tablet so that it can be easily seen and does not block the driver's line of sight.



RV Tablet 80 Hardware

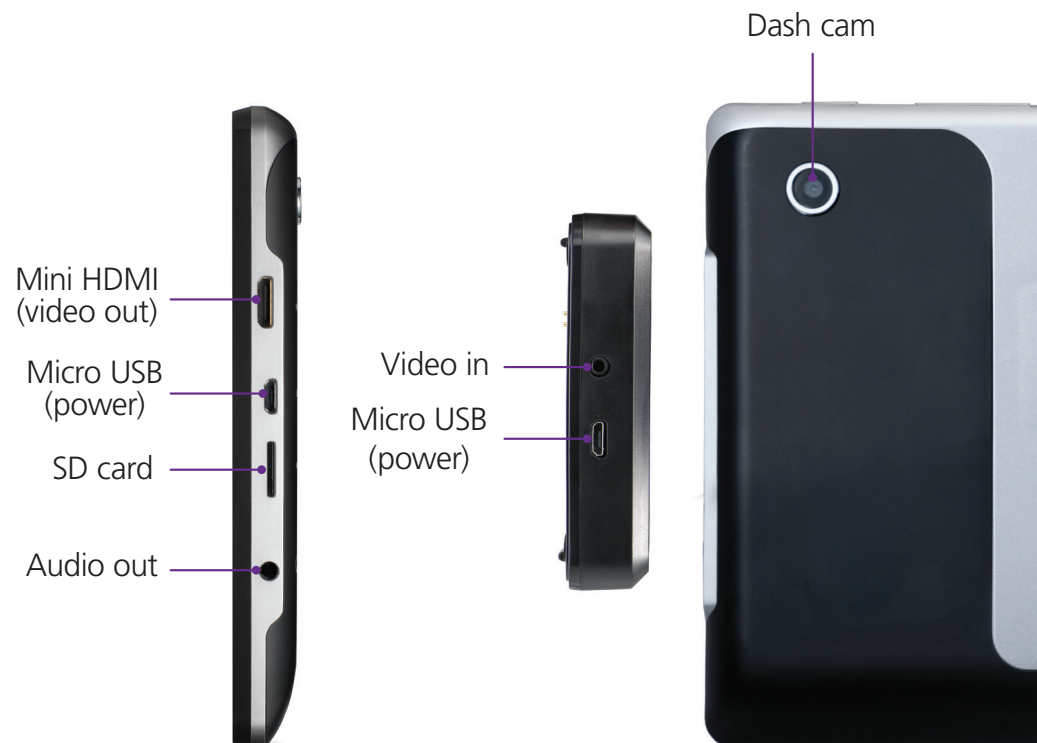

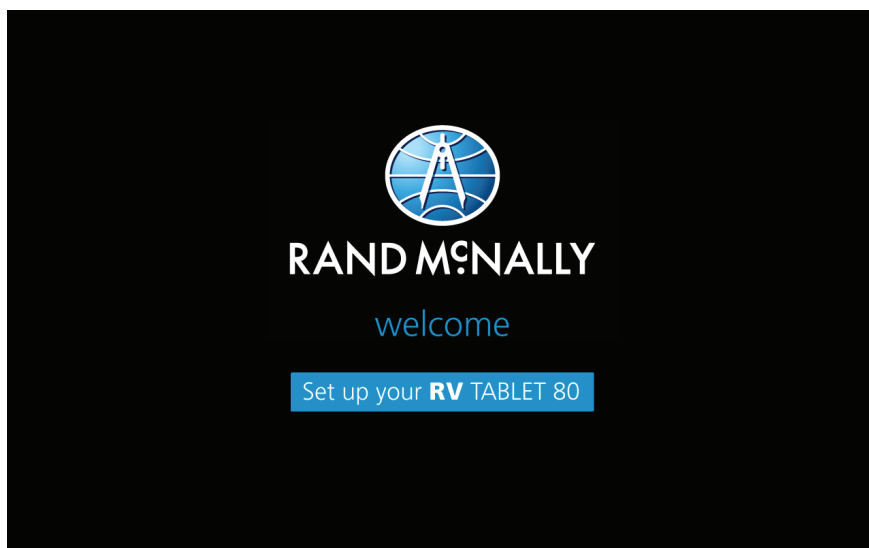

Connecting to Wi-Fi

When you first turn on your tablet, you'll be asked to select a Wi-Fi network to connect to the Internet. A Wi-Fi connection is required to browse the web, download apps, and use Internet-enabled features such as weather and traffic. Choose your wireless access point or hotspot from the list and type in your password.


Note: If you skip this step, you will not be able to use all the features of your tablet. The RV GPS app, however, does not require a Wi-Fi connection.

The image shows a black screen with the Rand McNally logo at the top center. Below the logo, the text 'Register your Tablet' is displayed in a light blue, sans-serif font. Underneath, there are four input fields: 'First Name' with the value 'William', 'Last Name' with the value 'Rand', 'Email' (empty), and 'Serial Number' with the value 'RV80-0000'. At the bottom, there are two blue rectangular buttons: 'Skip' on the left and 'Register' on the right.


Registration

In the next step, you'll be prompted to register your tablet with Rand McNally. Your registration ensures that you have access to the latest information and updates, as well as customer support.

Using Android

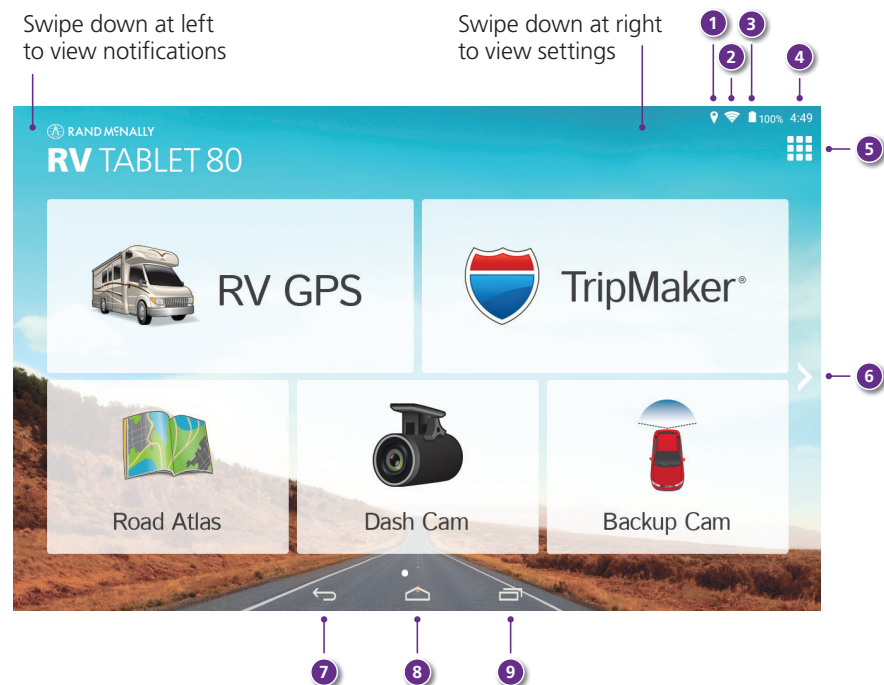


- 1 GPS is on
- 2 Wi-Fi is on
- 3 Indicates remaining battery power
- 4 Current time
- 5 View installed apps
- 6 Tap or swipe right to view second home screen
- 7 Back
- 8 Return to last home screen
- 9 View open apps

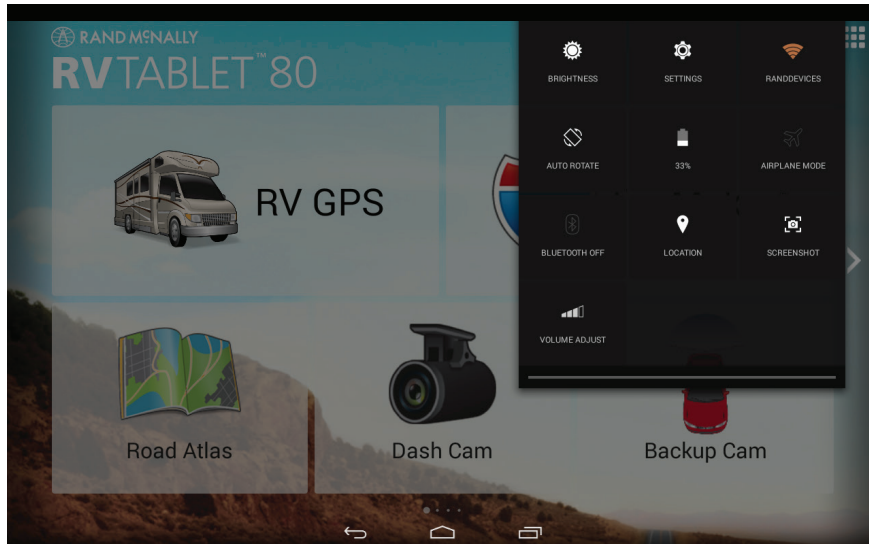

Settings

Swipe down from the right to view quick settings:

- **Brightness**
- **Wi-Fi** – Shows available networks
- **Auto-rotation** – Controls whether the screen rotates when you rotate the tablet
- **Battery power**
- **Airplane mode** – Turns off Wi-Fi and data transmission
- **Bluetooth** – Pairs other devices
- **Location** – Set mode (high accuracy recommended)
- **Screenshot** – Saves an image of the current screen
- **Volume**

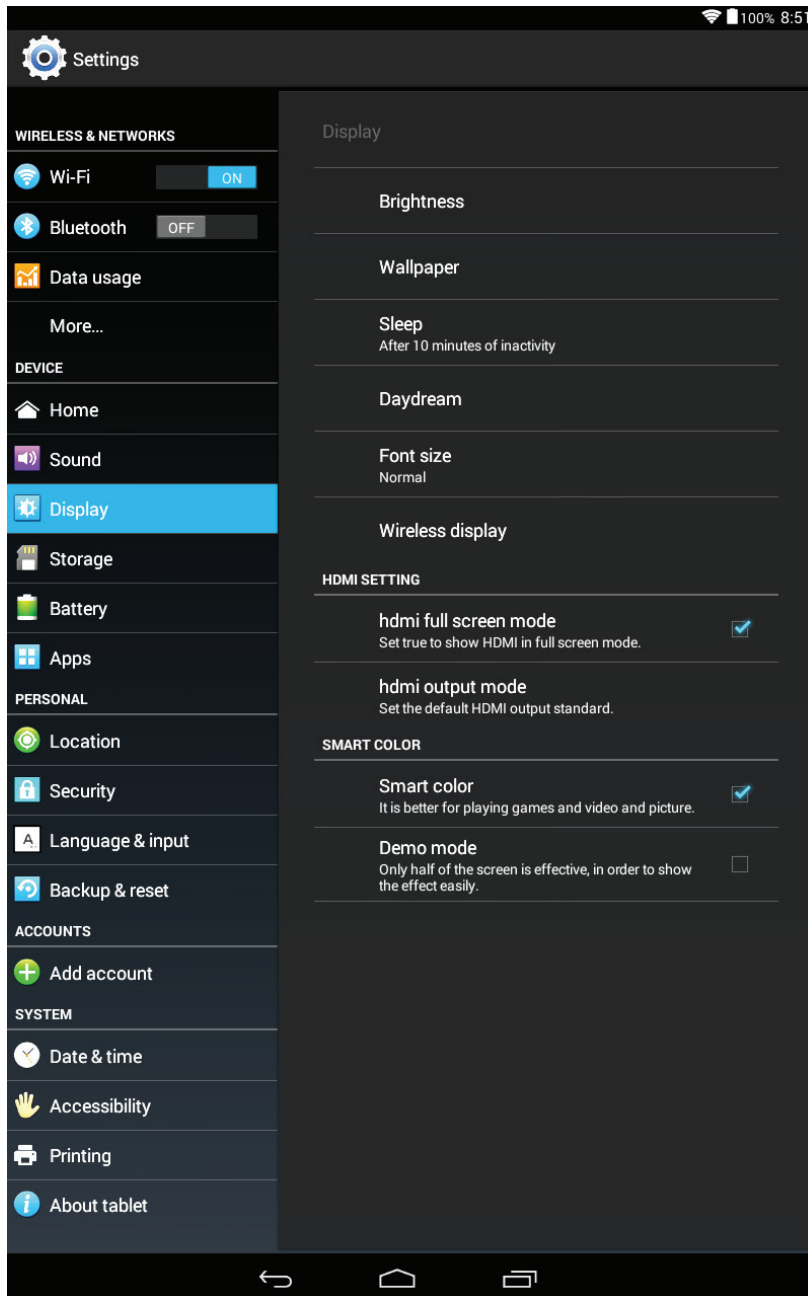


All Settings

Wireless and Networks

- **Wi-Fi** – View and connect to available Wi-Fi networks.
- **Bluetooth** – Pair with another device using Bluetooth.
- **Data usage** – Monitor how much data has been used by different apps.

Device

- **Home** – Select a different launcher. This will change the home screen that appears when the tablet powers on.
- **Sound** – Set volumes for different features and enable/disable sounds.
- **Display** – Set brightness, wallpaper, and appearance.
- **Storage** – View how much internal storage is available on your tablet.
- **Battery** – View time spent on battery and battery power used by different apps.
- **Apps** – View apps. Swipe right to view: downloaded, on SD card, running, all.

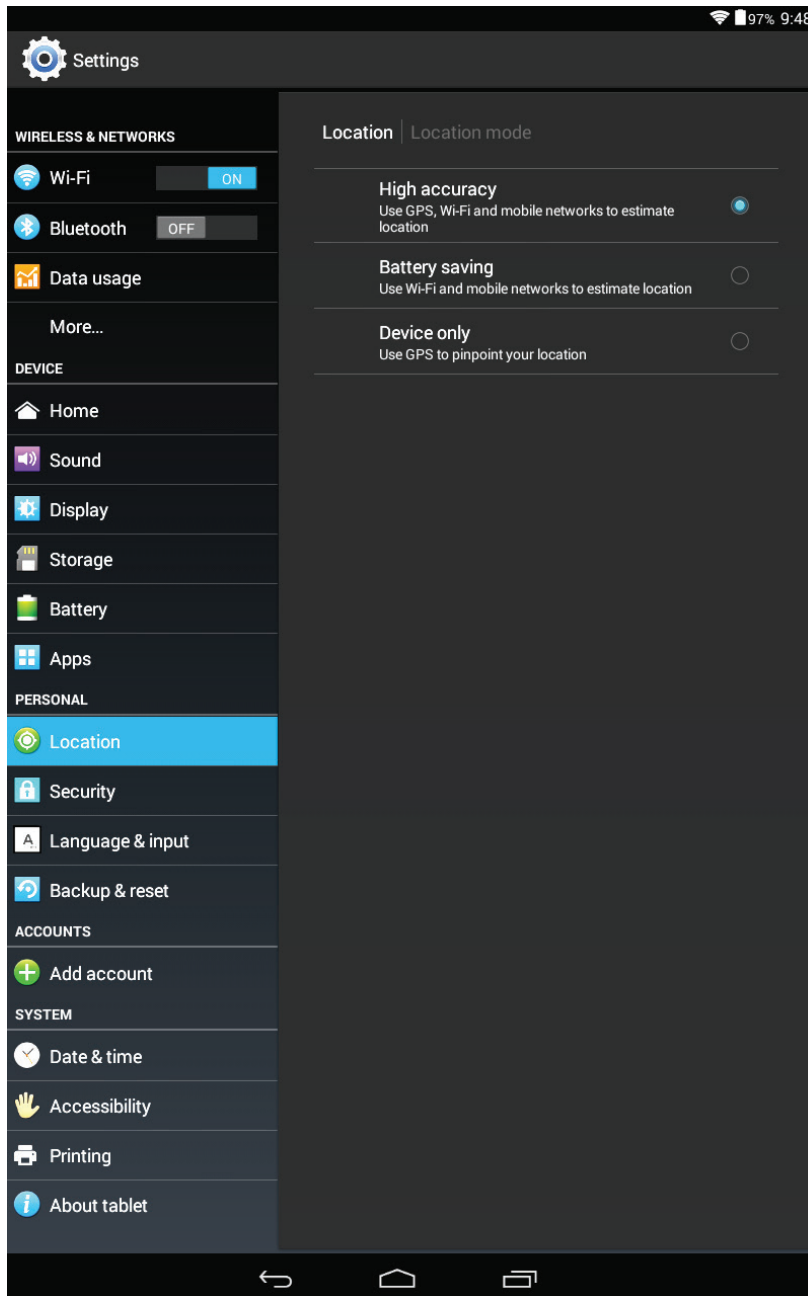

All Settings

Personal

- **Location** – View location mode, requests, and reporting. High accuracy mode is recommended.
- **Security** – Enable screen security (each time the screen turns on) and encryption (each time the tablet powers on). Also view passwords, device administration, and credential storage.
- **Language & input** – Set language and keyboard information, as well as speech options and pointer speed.
- **Backup & reset** – Back up the data stored on your tablet.

Accounts

- **Add accounts** – Add your email or other accounts.

System

- **Date & time** – Set date and time, time zone, and clock format.
- **Accessibility** – Enable spoken feedback to help blind and low-vision users.
- **Printing** – Enable printing services.
- **About tablet** – View network status and version numbers.



1 **RV GPS Main Menu** (See page 11.)

2 **TripMaker®**


Use the online planning tool to plan a trip with multiple via points and transfer it to the navigation app as a multi-stop trip. (See help available online.)

3 **Road Atlas** (See page 60.)

4 **Dash Cam** (See page 61.)


5 **Backup Cam** (Requires accessory.)

The bottom three buttons on the home screen can be changed according to your preferences. (To replace with other apps, open the app tray by tapping the upper right corner of the screen. Select **Rand McNally Launcher** and **Home Widget** settings. Tap a box and select a shortcut, or tap applications to view more. Tap **Save**.)

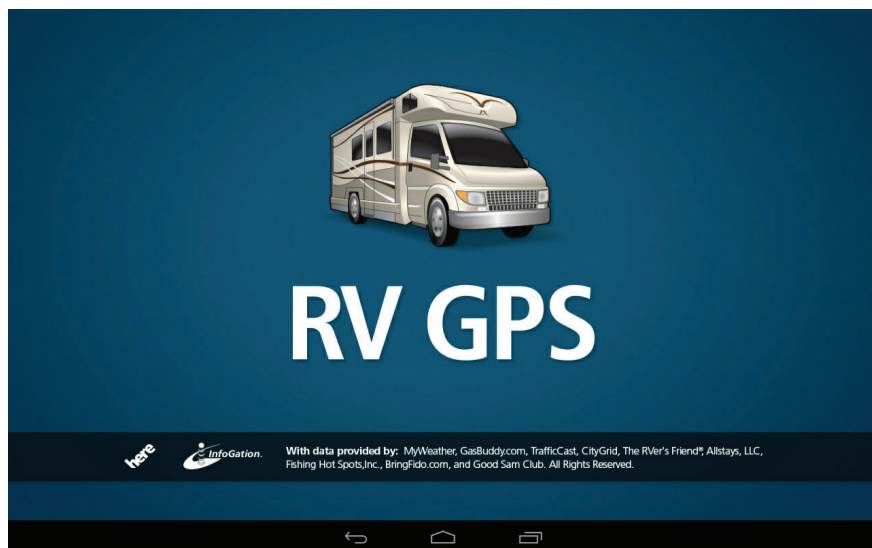

Notes on using the RV GPS app:

- When your tablet is attached to the magnetic mount, the GPS boost within the mount will provide accurate GPS location, even without a Wi-Fi connection.
- Weather, traffic, fuel prices, and local search within the RV GPS app require a Wi-Fi connection.
- To exit the RV GPS app at any time, swipe down from the top of the screen or up from the bottom to view the Android menu bars. Or tap the main menu button on the front of the device.

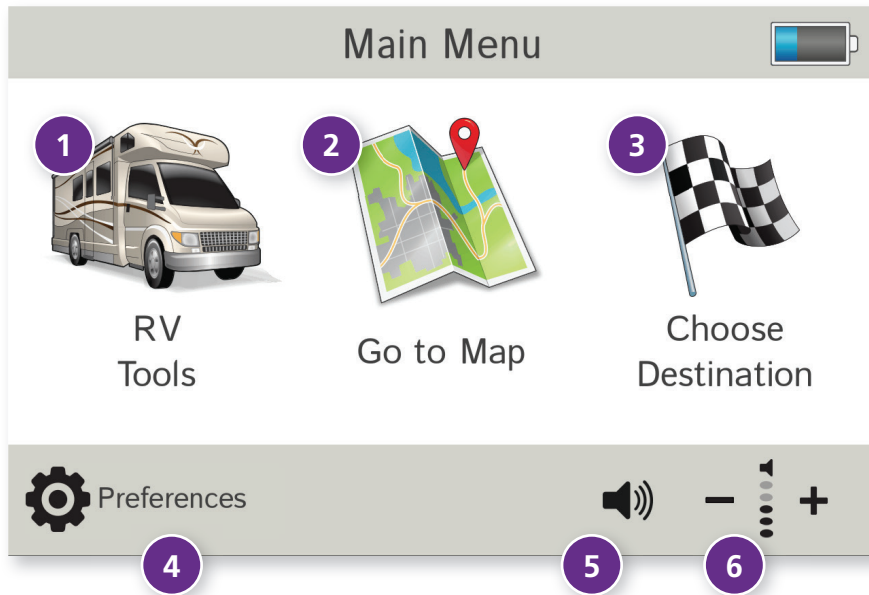

- 1 RV Tools**
Select to enter vehicle information, set warnings, and access other tools.
- 2 Go To Map**
Tap to view location on the map.
- 3 Choose Destination**
Tap to select an address or point of interest (POI).
- 4 Preferences**
Tap to set device, route, or map options.
- 5 Mute/Unmute the Speaker**
Tap to mute or unmute spoken instructions.
Note: You can also tap this icon when it appears on the map screen to mute/unmute.
- 6 Volume**
Tap to increase or decrease spoken instructions volume.

- 1. Tap  and  to view the options.
- 2. Tap the option to be set.
- 3. Enter the new information.

RV Tools	Page
----------	------

RV Info

Bottles of Propane	13
Size of Each Bottle	13
Height	13
Number of Axles	13
Number of Trailers	13
Routing Style	13
RV Type	13
Total Length	13
Weight	13
Width	13

Warnings

Auto Dismiss Warnings.....	14
Construction Area	14
Crossing State Border/ Time Zone Change Warning	14
Curve Warnings.....	14
Hill Warnings	14
Narrow Road Warnings	14
Warning Display Size	14
Speed Limit Warning	14
Speed Limit Change Warning	14
State/Province Border Alert	14
Toll Booth Alert	14
Warning/Alert Prompts	14

Device Preferences	Page
--------------------	------

General

Brightness	15
Clock Setting	16
Contact + About	16
Day/Night Mode	15
Day/Night Auto-Switch Offset	15
Home Time Zone	15
Keyboard	15
Language	15
My Custom POIs	15
Screen Click	15
Screen Snapshot Button	16
Shortcut Button	16
Skin Style - Day.....	15
Skin Style - Night	15
Toll Prompt/Notification.....	15
Tutorial	15
Units	15
Vehicle Type	15
Voice Name	15

Device Preferences	Page
--------------------	------

Route

Cross-Country Borders	17
Dirt Roads	17
ETA Adjustment	16
Fast Recalc	17
Ferries	16
Freeways	16
Junction View Distance.....	17
Manage Avoid List	17
Recalculation	16
Route	16
Tollways	16
Tunnels	17
Turn Announcements	17
Turn View Distance	17
U-Turns	16

Map

Address Book Icons	18
Car/Light Truck Icon	18
Map Auto Zoom	18
Map Style	18
POI Icons	18
Route Color	18
RV Icon	18
RV POI Icons	18

RV Info	Options
RV Type	Class A Class A w/Tag Axle Class B Class C Class C (Super) Fifth Wheel Hybrid Trailer Popup Trailer Toy Hauler Trailer Travel Trailer RV Camper
Routing Style	More truck like Between truck and car More car like Note: All routes will take physical/legal restrictions into consideration.
Bottles of Propane	Use the + and - buttons or enter a numeric value by tapping the calculator.
Size of Each Bottle	Use the + and - buttons or enter a numeric value by tapping the calculator.
Number of Trailers	0 1 2
Total Length (RV + Trailers)	Use the + and - buttons or enter a numeric value by tapping the calculator.

RV Info	Options
Weight	Use the + and - buttons or enter a numeric value by tapping the calculator.
Height	Use the + and - buttons or enter a numeric value by tapping the calculator.
Width	Use the + and - buttons or enter a numeric value by tapping the calculator.
Number of axles	Use the + and - buttons.

Warnings	Options
Warning/Alert Prompts	None Audio & Visual Visual Audio
Auto Dismiss Warnings	Never After 10 seconds After 30 seconds <i>Height and weight violations will not be auto dismissed.</i>
Warning Display Size	Full screen Small bar
Curve Warnings	Set warning distance to curves by using the + and - buttons.
Hill Warnings	Set warning distance to hills by using the + and - buttons.
Narrow Road Warnings	Set warning distance to narrow roads by using the + and - buttons.
State/Province Border Alert	Set warning distance to state borders by using the + and - buttons.
Crossing State Border/ Timezone Change Warning	Off On

Warnings	Options
Toll Booth Alert	Set warning distance to toll booths by using the + and - buttons.
Construction Area	Set warning distance to construction areas by using the + and - buttons.
Speed Limit Warning	Set the amount over the posted limit at which a speed warning appears. Or set user-defined maximum speed to be warned whenever the vehicle exceeds that speed, regardless of posted speed limits.
Speed Limit Change Warning	Set warning distance to speed limit changes by using the + and - buttons.

Note: To turn warnings off completely, tap the - button until "off" displays.


General Preferences	Options	General Preferences	Options
Skin Style - Day	Ice Carbon	My Custom POIs	Tap Manage Custom POIs to specify how custom POIs are displayed on the map: set image, warning distance, warning type, and street/city/state level map display. Tap the "x" to delete any set of POIs.
Skin Style - Night	Ice Carbon	Toll Prompt/Notification	Enabled Disabled
Vehicle Type	RV Car <i>Controls how routes are calculated.</i> Note: Some tools and settings may not be available in car mode.		<i>Set whether or not you want to be asked about tolls when you calculate a route.</i>
Home Time Zone	Hawaii Alaska Pacific Time Arizona Mountain Time Central Time Eastern Time Indiana (East) Atlantic (Canada) Newfoundland	Screen Click	Click off Click on
Day/Night Mode	Always day Always night Automatic	Tutorial	View on-device tutorial
Day/Night Auto-Switch Offset	Set the amount of time after sunrise/sunset when the automatic mode switch occurs.	Keyboard	ABC Computer (QWERTY)
Brightness	Set for night mode. Note: Day mode brightness is controlled by tablet settings.	Voice Name	Allison Samantha Susan Tom
		Language	English (Basic) English (Advanced) Español Français <i>For the screen and spoken instructions.</i>
		Units	U.S. Standard Metric Auto Select

General Preferences	Options
Clock Setting	12-hour clock 24-hour clock
Screen Snapshot Button	Off On
Shortcut Button	Main Menu Go to Map <i>Set the shortcut that appears in the bottom right corner of the screen.</i>
Contact + About	Tap to show version information and copyrights.

Route Preferences	Options
Note: The default settings for your device are already optimized for RV routing. Use the options below to fine-tune these settings. A route may still include a roadway or maneuver set to Avoid if the only legal route found contains these types of roads or the route is over several hundred miles.	
ETA Adjustment	Increase ETA more Increase ETA some ETA ok Decrease ETA some Decrease ETA more <i>Set adjustments to your ETA due to weather or traffic conditions. You can add (increase) time to make the trip take longer or subtract (decrease) time to make the trip take less time.</i>
Recalculation	Manual recalculate Auto recalculate
Route	Fastest route Shortest route
Freeways	Allow all (default) Avoid freeways Prefer freeways Avoid small roads
Tollways	Allow tollways Avoid tollways
U-Turns	Allow u-turns Avoid u-turns
Ferries	Allow ferries Avoid ferries

Route Preferences	Options	Route Preferences	Options
Cross-Country Borders	Allow crossing borders Avoid crossing borders	Turn View Distance	Set the distance before the maneuver at which the local street turn view screen appears. (Note: In 3D map view, this warning is not needed and will be turned off.)
Dirt Roads	Allow dirt roads Avoid dirt roads	Junction View Distance	Set the distance before the maneuver at which the highway junction view screen appears.
Tunnels	Allow tunnels Avoid tunnels		
Manage Avoid List	Roads States/Provinces Areas Routes <i>To avoid a state or province, select it from this list. Tap on the map and select a road, area, or route to add it to the Avoid List. (See page 31.)</i>		
Fast Recalc	Off On <i>Fast recalc calculates a route to a midpoint between your location and the destination, rather than recalculating the entire route from scratch. Best used on a long route that has short distances between intersections.</i>		
Turn Announcements	Set three distances at which you want to be warned about an upcoming turn. The first announcement will be the farthest from the turn and the third the closest to it.		



Map Preferences	Options	Map Preferences	Options
Map Style	Light Dark High contrast	Address Book Icons	Off On
Map Auto Zoom	Off On, auto scale On, street scale On, city scale On, state scale <i>Set to auto scale to keep the current vehicle position and the next turn in the map view at all times. Set to street/city/state scale to specify the maximum scale of the zoom.</i> Note: Map redraw speed is impacted by autozoom, especially when combined with 3D map display option.	<i>Address book entries appear as pushpin icons unless they are assigned to a group. Grouped entries appear as folders.</i> RV Icon	Use the arrows to select different icons to display when using the RV setting. Use the slider to change the color.
		Car/Light Truck Icon	Use the arrows to select different icons to display when using the car setting. Use the slider to change the color.
		Route Color	Use the slider to select.
POI Icons	Off On <i>Select icons to display on the map.</i> <i>Select restaurants, banks, and consumer POIs ("Other" category) to display on the map.</i>		
RV POI Icons	Off On <i>Select parks, campgrounds, pet-friendly locations, and other RV POIs to display on the map.</i>		

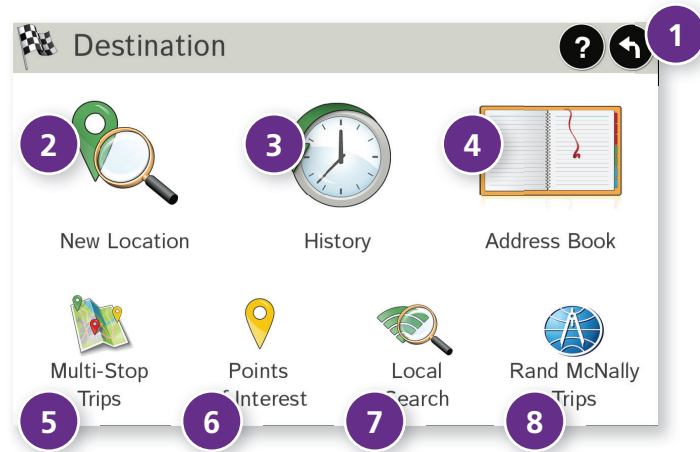

Destinations

To access this window from the Main Menu, tap **Choose Destination**.

- 1 **Back**
Tap to return to the Main Menu.
- 2 **New Location**
Tap to route to a new location by address, city center, intersection, or latitude/longitude.
- 3 **History**
Tap to route to a recently entered location.
- 4 **Address Book**
Tap to view a list of saved locations.
- 5 **Multi-Stop Trips**
Tap to view a list of saved multi-stop trips or to create a new one.
- 6 **Points of Interest/POIs**
Tap to search for a point of interest (POI) such as a gas station, restaurant, etc.
- 7 **Local Search**
Tap to search for local businesses, restaurants, and more by name or keyword. (**Note:** Wi-Fi connection required.)
- 8 **Rand McNally Trips**
Tap to discover unique trips and tours.

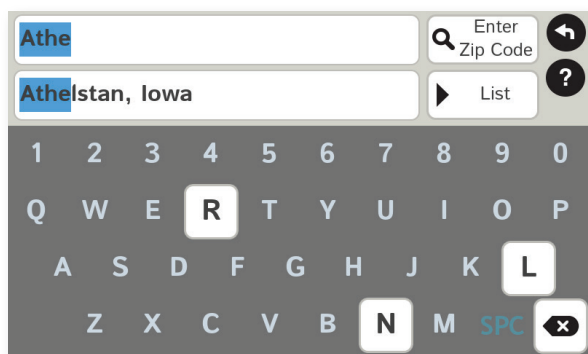

Tap to view a longer list of names matching the typed characters.



Tap to view a list of previously selected locations.



Add a space.



Delete last character and move back one space.



Type an apostrophe, hyphen, or other symbol.

Helpful Tips on Entering Addresses

Auto-Complete Feature:

Enter the first few characters in a name and a short list displays a couple of names that start with the typed characters.

On the keyboard, the only keys available are for the next valid characters in a search name.

Continue entering characters until the searched-for name displays in the list. Tap on the name to select it.

Cities:

Some cities with common names such as “Athens” have several types of names associated with a city.


If a name does not display, continue typing characters until the name you are looking for displays in the list.

Streets:

If the next letter in the street name can not be selected on the keyboard, tap **Expand Search** to search a greater area.

The **Expand Search** button can also help locate addresses that may actually be in a different town, spelled slightly differently, or in a neighboring town.

Note: If you’re entering a State or County Route, it’s typically best to first either enter the State or County initials (for example, State Road 535 would be entered as “SR”) but you may also need to try other options, such as “State Road” or “CA” for California, for example.

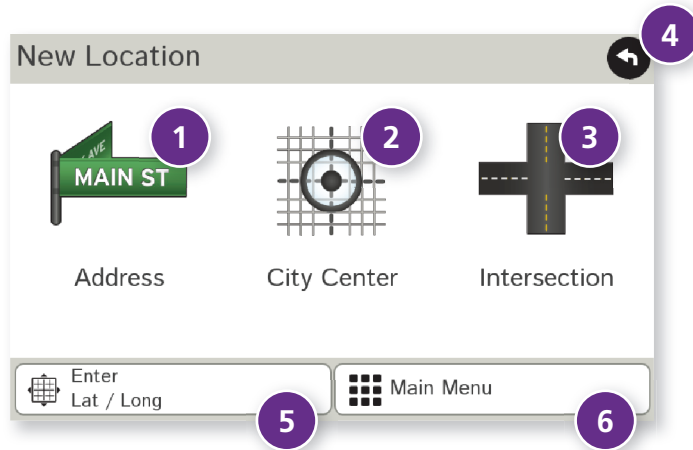

New Location

- 1 Address**
Tap to route to an address by entering the city, street, and number, or by entering the zip code and street.
- 2 City Center**
Tap to route to a city center.
- 3 Intersection**
Tap to route to two intersecting roads in a city.
- 4 Back**
Tap to return to the previous window.
- 5 Enter Lat/Long**
Tap to route to a location by latitude and longitude.
- 6 Menu**
Tap to return to the Main Menu.

Search for an Address

1. Tap **Choose Destination > New Location > Address**.
2. Type the first few characters in the city name. As you type, a short list of matching city names displays.
3. Tap on a city to select it.
 - If the city is not displayed on the short name list, continue typing characters in the city name or tap **List** to display a long list of city names. Use the up and down arrows to view all cities/states. Tap on a city to select it.

Note: If a city name appears twice within a state, you may need to check both for your specific address.

4. Or tap **Enter Zip Code**. Type the zip code.
5. Type the first few characters in the street name, or if the next characters of the street name cannot be selected on the keyboard, tap **Expand Search** and search a wider area.
6. Tap on the street name from the displayed list.
7. Tap the house number or tap **List** to show a list of address ranges and select a range.

Note: To enter the **House Number** before the street, tap this button in step 5. This preference will be saved for subsequent address entry.

8. Tap on the street number range from the list.
The **Confirmation Window** displays. (See page 37.)
9. Tap **Begin New Route** to navigate to the location.

Select City (small towns listed last) ? ↶

RICHMOND, BRITISH COLUMBIA

RICHMOND, CALIFORNIA

RICHMOND, ILLINOIS

RICHMOND, INDIANA

RICHMOND, KANSAS

Go to Map

Select street ↶

BROADMOOR BLVD

BROADWAY ST

BROCK ST

BROMFIELD PL

BROMLEY PL

Go to Map

Select Intersecting Street ↶

BROWNELL RD

BROWNGATE RD

CAMBIE RD

LESLIE RD

ODLIN CRES

Go to Map

Route to a City Center

1. Tap **Choose Destination > New Location > City Center**.
2. Type the first few characters in the city name.
3. Tap on the city/state name.
The **Confirmation Window** displays. (See page 37.)
4. Tap **Begin New Route** to navigate to the location.

Route to an Intersection

5. Tap **Choose Destination > New Location > Intersection**.
6. Type the first few characters in the city name.
7. Tap on the city name.
8. Type the first few characters in the primary street name, or if the next characters of the street name cannot be selected on the keyboard, tap **Expand Search** and search a wider area.
9. Tap on the street name in the list.
10. Type the first few characters in the intersecting street name.
11. Tap on the intersecting street name.
The **Confirmation Window** displays. (See page 37.)
12. Tap **Begin New Route** to navigate to the location.

Enter Latitude

42°29'3

Enter

Sample: (Lat) 34.0498 Or 34°2'59" N

N S

Go

Enter Longitude

-92.34194

Enter

Sample: (Long) -117.34567 Or 117°20'44" W

W E

Go

Enter Geographic Coordinates

Latitude: 42°29'3"N

Longitude: -92.34194

Go




Sample: (Lat) 34.0498 Or 34°2'59" N (Long) -117.34567 Or 117°20'44" W

Go to Map

Route to a Latitude/Longitude

1. Tap **Choose Destination** > **New Location** > **Enter Lat/Long**
2. Tap in the **Latitude** field.
3. Enter the latitude of the location and tap **Enter**.
4. Tap in the **Longitude** field.
5. Enter the longitude of the location and tap **Enter**.
6. Tap **Go**. The **Confirmation Window** displays. (See page 37.)
7. Tap **Begin New Route** to navigate to the location.

Note: There are two ways to enter latitude/longitude: by decimal degrees or by degrees, minutes, and seconds.

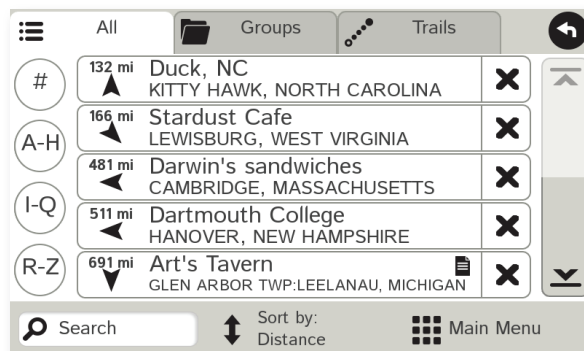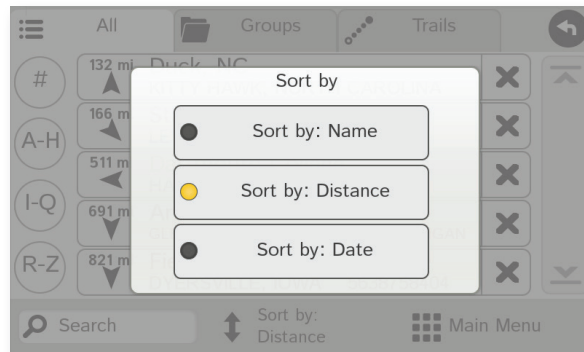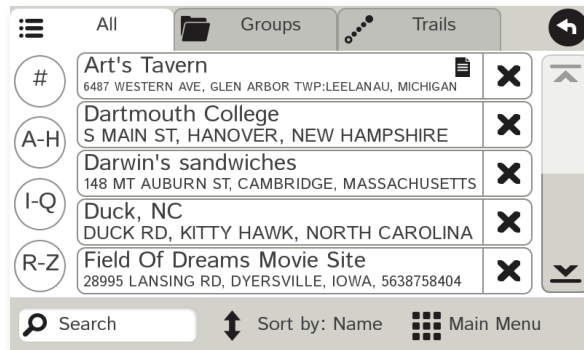

Address Book

Add Locations to the Address Book from the **Confirmation Window** (See page 37.):



1. Tap **Save to Address Book**.
2. Tap **Yes** to accept the default name or tap **No** to display a keyboard.
3. Type the name of the location and tap **Enter** to save the location in the Address Book. The Confirmation Window re-displays.

Entries

- Tap **Choose Destination > Address Book**. Entries are alphabetically sorted by **Name**.
- To sort by **Distance** or **Date**, tap **Sort By**.
- Use the up and down arrows to scroll through the list or use the alphabet buttons on the left.
- Tap the **Search** field to search the Address Book by keyword.
- The notepad icon indicates a note has been added for this location.

Route to an Address Book Location

1. Tap **Choose Destination > Address Book**.
 - Tap on the **All Addresses** tab or
 - Tap on the **Groups** tab.
2. Tap on an address to select it. The **Confirmation Window** displays. (See page 37.)
3. Tap **Begin New Route** to navigate to the location.

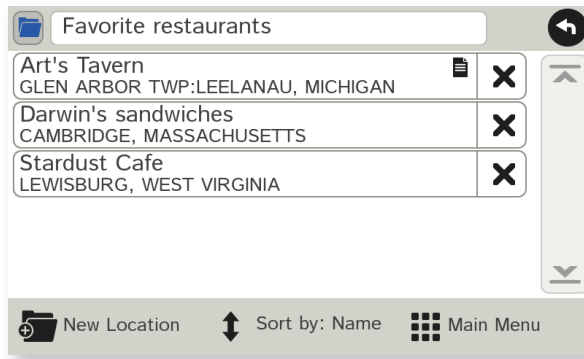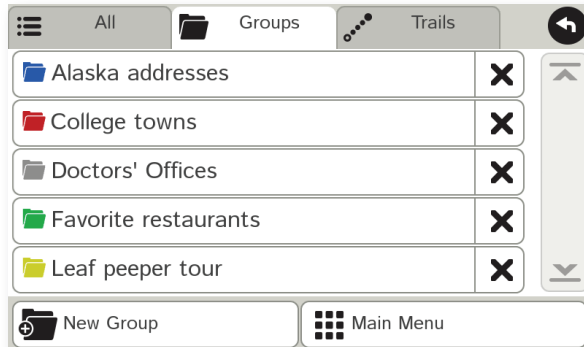

Create a Group

1. Tap **Choose Destination > Address Book**.
2. Tap on the **Groups** tab.
3. Tap **New Group**.
4. Type the group name.
5. To select a different color folder, tap .
6. Tap on a color, then tap **Close**.
7. When finished, tap **Enter**.

Tap on the **X** next to a group to delete the group.
Addresses will still be saved in the Address Book.




Note: You can also choose to display address book icons on the map. (See page 18.)

Add an Address to a Group

1. Tap **Choose Destination > Address Book**.
2. Tap the **Groups** tab.
3. Tap on the group you want to add an address to.
4. Tap **New Location**.
5. Tap **Enter New Address, History, Address Book, or POI**.
6. If you selected:
 - **History, Saved, or POI**, the selected location is added to the group.
 - Enter a New Address, tap **Yes** to accept the default name or tap **No** to display a keyboard and enter a new name.

Remove an Address From a Group

1. Tap **Choose Destination > Address Book**.
2. Tap on the **Group** tab.
3. Tap on the Group you want to remove the address from.
4. Tap on the **X** next to the address to be removed.
5. Tap **Yes**.

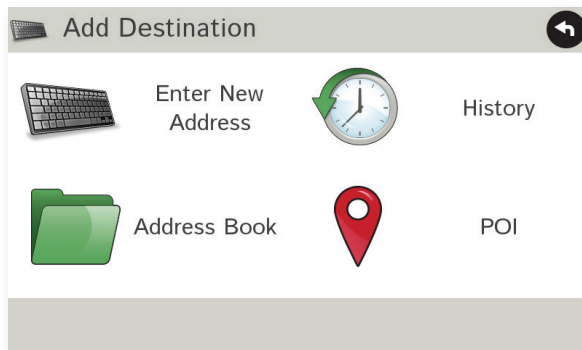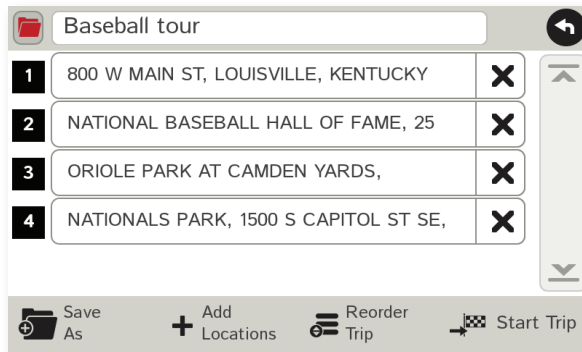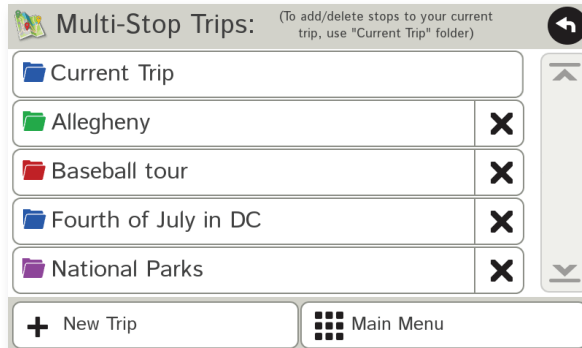

Create a Multi-Stop Trip

1. Tap **Choose Destination > Multi-Stop Trips**.
2. Tap **New Trip**.
3. Type the trip name.
4. To select a different color folder, tap .
5. Tap on a color, then tap **Close**.
6. When finished, tap **Enter**.

Note: A multi-stop trip can include up to 50 stops.

Add a Stop




Note: You can add locations in the order you want to route to them or reorder stops later.

From the Main Menu:

1. Tap **Choose Destination > Multi-Stop Trips**.
2. Tap on the route.
3. Tap **Add Address**.
4. To add an address, tap **Enter New Address, History, Address Book, or POI**.
5. A Confirmation Window asks if you want to add another stop. Tap:
 - **Yes** to add another stop
 - **No** if the route is complete.
6. Tap **Back** to save changes.

Remove a Stop

1. Tap **Choose Destination > Multi-Stop Trips**.
2. Tap on the route.
3. Tap on the **X** next to the stop to be removed.
4. Tap **Yes**.

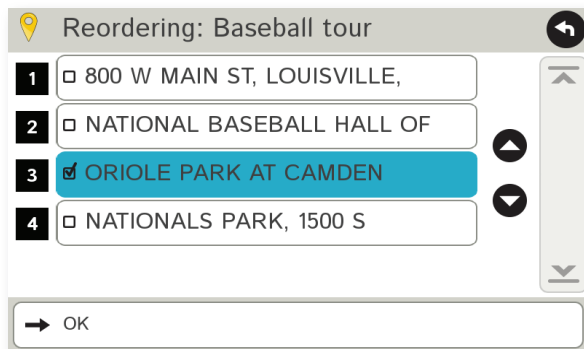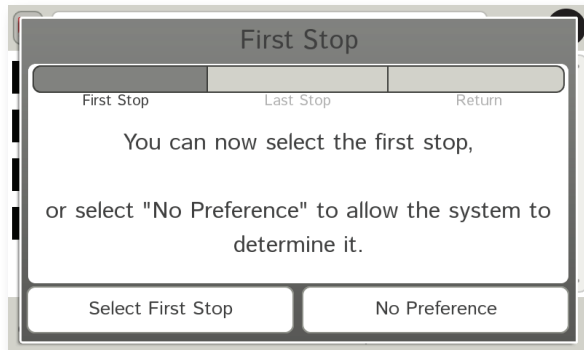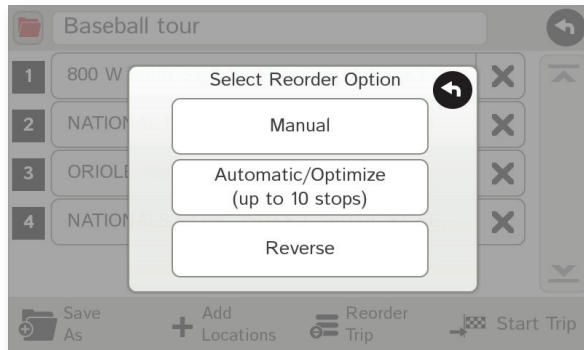

Reorder Routes

Optimize Automatically



After all locations have been added to a multi-stop trip, you can run the optimizer wizard to organize your trip.

1. Tap **Choose Destination > Multi-Stop Trips**.
2. Tap on the route you want to optimize.
3. Tap **Reorder Trip**.
4. Tap **Automatic/Optimize**.
5. Tap **Select First Stop** and select the first stop, or **No Preference**.
6. Tap **Select Last Stop** and select the last stop, or **No Preference**.
7. Tap **Yes** to return to your current location to complete the route or **No** to complete the route at the last stop.
8. Tap **Start Trip** to begin the route.

Note: There is a limit of ten stops that can be optimized automatically.

Reorder a Route Manually

1. Tap **Choose Destination > Multi-Stop Trips**.
2. Tap on the route you want to optimize.
3. Tap **Reorder Trip**.
4. Tap **Manual**.
5. Tap on the stop to be moved and tap the arrows to move stops up or down.
6. When finished, tap **OK**.
7. Tap **Start Trip** to begin the route.

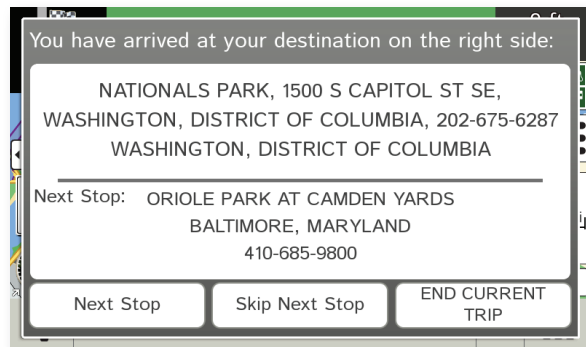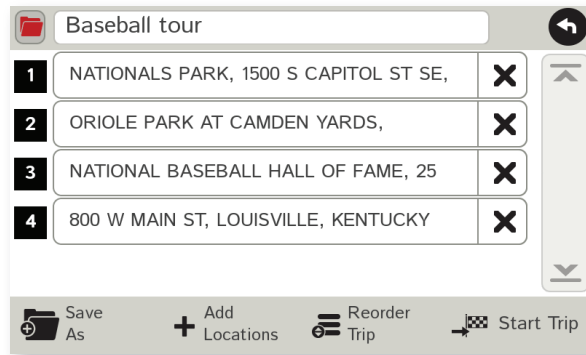


Select and Run a Saved Route

1. Tap **Choose Destination > Multi-Stop Trips**.
2. Tap on the route to select it.
3. Tap **Start Trip**.
4. The device calculates the route to your first stop. When you have reached the stop, a message displays.
5. Tap:
 - **Next Stop** - To calculate a route to the next stop in the route.
 - **Skip Next Stop** - To skip the next stop and calculate a route to the stop after the next one.
 - **End Current Trip** - To end the route at the current stop.

Note: To view your entire trip, select **Summary Map View** from the **Route Display Options**.

Delete a Route

1. Tap **Choose Destination > Multi-Stop Trips**. The Multi-Stop Trips window displays.
2. Tap on the **X** next to the route to be deleted.
3. A confirmation message displays.
4. Tap:
 - **Yes** to delete the route.
 - **No** to keep the route.

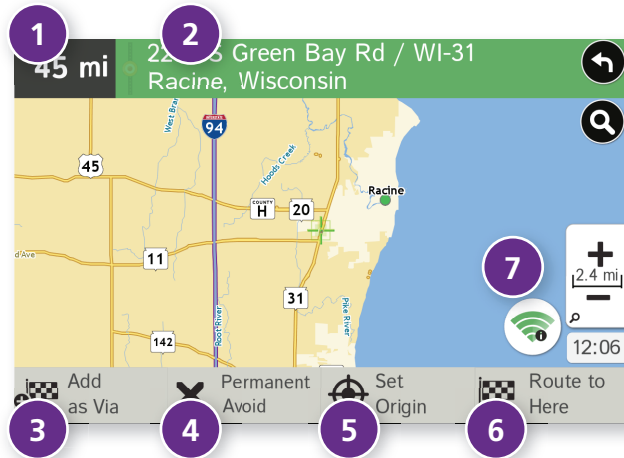


Tap on the Map


When you tap on the map screen, the crosshairs  display.

- 1 Distance to this location from current location.
- 2 Location of crosshairs.
- 3 **Add as Via**
Add a via—an interim stop between the origin and the destination.
- 4 **Avoid**
Tap to avoid the route, road, or area, or to detour.
- 5 **Set Origin**
Set the location as the starting point of the route.
- 6 **Route to Here**
Tap **Begin New Route** to navigate to the location.
- 7 **Wi-Fi**
View live information at this location with a Wi-Fi connection.


Avoid Options

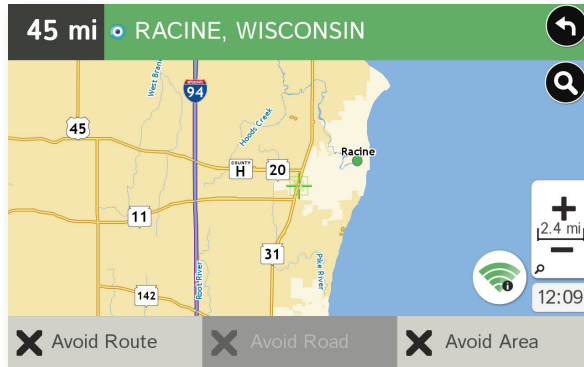

Avoid Route

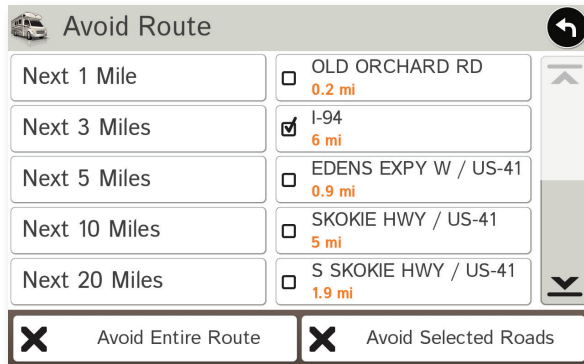

Avoid Area

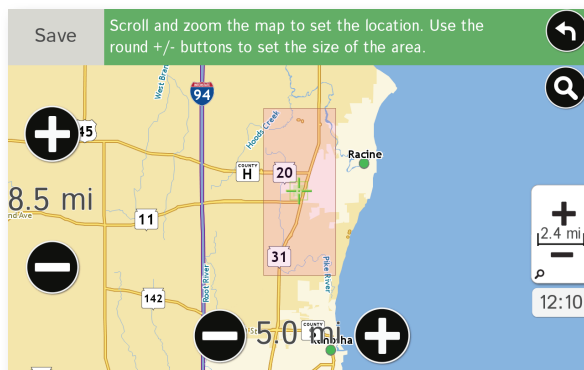

Avoid List

From the map, set specific locations to avoid. Tap on the map and select **Permanent Avoid**. Choose **Avoid Route**, **Avoid Road**, or **Avoid Area**. Or, if the location is along an active route, choose **Detour**.

Avoid Route

Choose whether to avoid an upcoming distance on an active route, in the left column, or a specific road section, in the right column. Or, select **Avoid Entire Route**. The route is recalculated and the avoided sections are added to the Avoid List, under **Routes**.

Avoid Road

Add the selected road segment to the Avoid List, under **Roads**. (**Note:** Reposition the map after zooming in or out to be sure to select the right location.) Road segments that have been permanently avoided are shown in pink on the map when zoomed in. Tap on a segment and tap **Remove Avoid** to remove the segment from the Avoid List.


Detour

Detour around a road segment on an active route. The route is recalculated, but the road segment is only avoided temporarily and does not appear on the Avoid List. To cancel the detour, tap the icon in the lower left-hand corner of the map screen and select **Detour**. (See page 45.)

Avoid Area


Set an area on the map to avoid. Increase/decrease the size of the area using the **+** and **-** buttons. Tap **Save** to add the area to the Avoid List, under **Areas**. Enter a name for the area. If an active route has been entered, the route does not recalculate. Avoided areas are shown on the map in pink.

To remove items from the Avoid List, tap **Manage Avoid List** in **Preferences > Route**. Tap the **X** to remove. Tap **Roads** in the Avoid List to view avoided roads on the map. You may need to re-enter your destination to recalculate an active route.

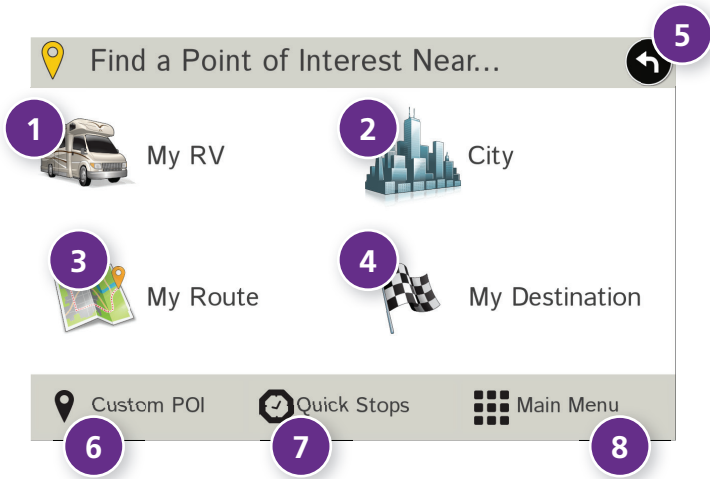



Points of Interest (POIs)

- 1 My RV/Near Car**
Tap to search for a point of interest near the current vehicle location.
- 2 City**
Tap to search for a point of interest in a city.
- 3 My Route**
Tap to search for a point of interest along the vehicle route.
- 4 Destination**
Tap to search for a point of interest near the route destination.
- 5 Back**
Tap to return to the previous window.
- 6 Custom POI**
Tap to select a custom POI location.
- 7 Quick Stops**
Tap to find a travel center near the current RV location.
- 8 Map/Main Menu**
Tap to return to the Map or Main Menu.

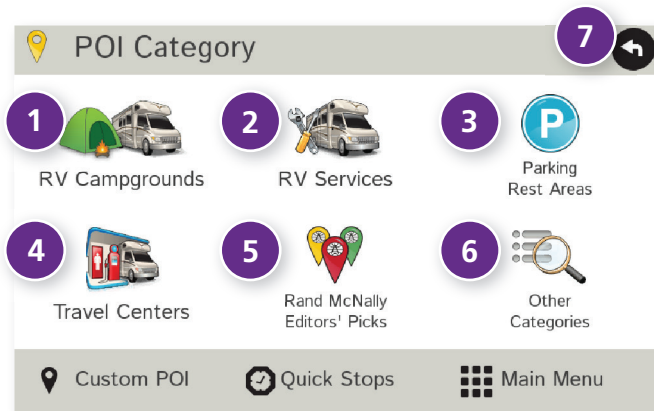




Points of Interest (POIs)

- 1 RV Campgrounds**
 Tap to search for RV campgrounds.
 (See page 35 to filter commercial campgrounds by amenities.)
- 2 RV Services**
 Tap to search for an RV services POI.
- 3 Parking & Rest Areas**
 Tap to search for RV parking at rest stops and Walmart locations.
- 4 Travel Centers**
 Tap to search for a travel center. (See page 35 to filter by amenities.)
- 5 Rand McNally Editor's Picks**
 Tap to search for national parks, festivals, and other places to visit.
- 6 Other Categories**
 Tap to select from a wide range of restaurants, shopping, and other POIs.
- 7 Back**
 Return to previous window.

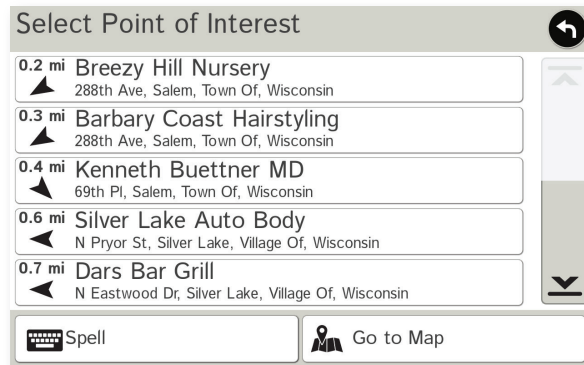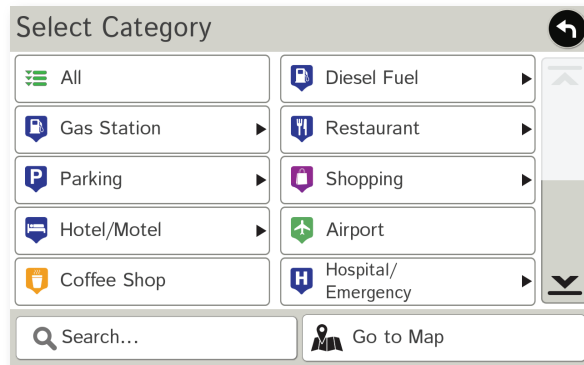

Other Categories

1. Tap **Choose Destination > Points of Interest**.
2. Select a search type (**My RV/My Car, City, My Route,** or **Destination**).
3. Tap **Other Categories**.
4. Tap on a category. (For example, tap **Hospital/Emergency**.)
5. If necessary, tap on a subcategory type. (For example, tap **Pharmacy**.)
6. Tap on a location from the list
or
7. Tap **All**.
8. Tap on the **Spell** button to display the keyboard.
9. Type the first characters in the POI name.
10. Tap on the POI name in the displayed list.

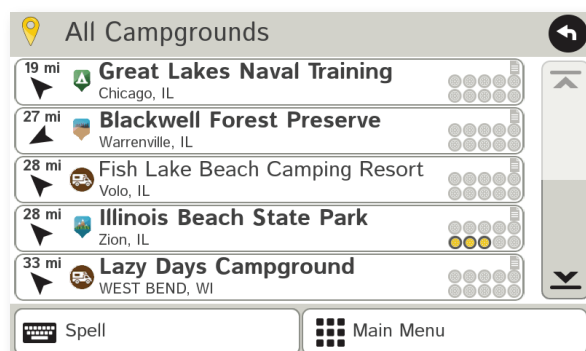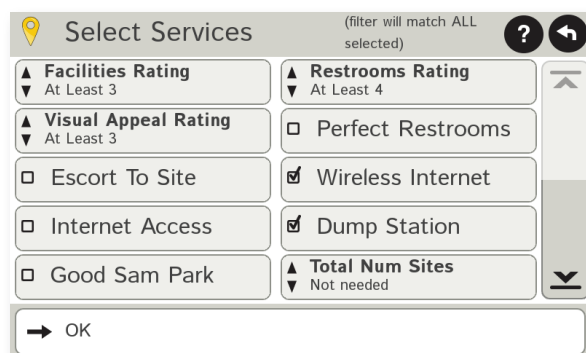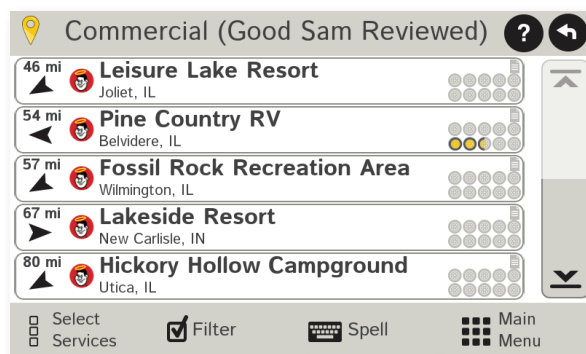

Select and Filter Commercial Campgrounds and Travel Centers

To select only locations with amenities that you are interested in, filter your search results.




1. Tap **Choose Destination > Points of Interest**.
2. Select a search type (**My RV/My Car, City, My Route, or Destination**).
3. Tap **RV Campgrounds > Commercial (Good Sam Reviewed) or Travel Centers**.
4. Tap **Select Services**.
5. Click on the check box of each amenity to be included in the search.
6. Tap **OK**.
The window displays POI locations with your selected amenities.
7. Tap on a location from the list.
8. A check next to Filter indicates the search terms have been applied. Tap **Filter** to return to general search results.

Rate a Point of Interest

You can rate campgrounds and other POIs from the **Confirmation Window**. (See page 37.)

For each POI, the top row of circles indicates the community rating from fellow drivers for the point of interest. The bottom row indicates your individual rating.

1. Tap on the **POI Ratings** button.
2. Use **—** and **+** to rate the facility.
3. Tap **Create Comment** and type a personal comment on the facility.
4. Tap **Enter** to save the comment.
5. Tap **Back** to save changes.

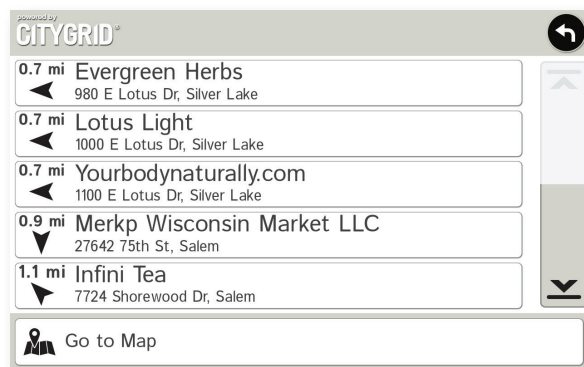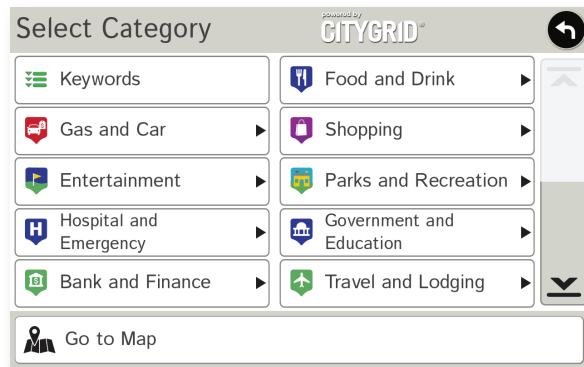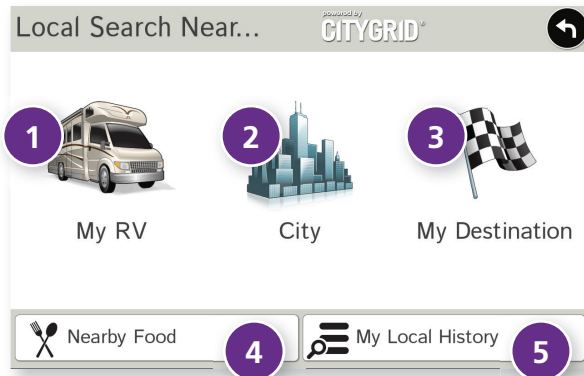

Note: This feature requires a Wi-Fi connection.

Use Local Search to search the Internet for a restaurant, business, or any type of location by name, keyword, or category. Tap **Choose Destination > Local Search**.

Choose whether to search:


- 1 near your vehicle
- 2 in a specific city
- 3 near your destination

Select a category, or tap **Keywords** to search using a specific name (e.g., "Subway") or a keyword ("sandwich").


- 4 Tap **Nearby Food** to show a list of area restaurants based on your current location.
- 5 Tap **My Local History** to show a list of previous searches.

Screens differ according to destination type:


New Location

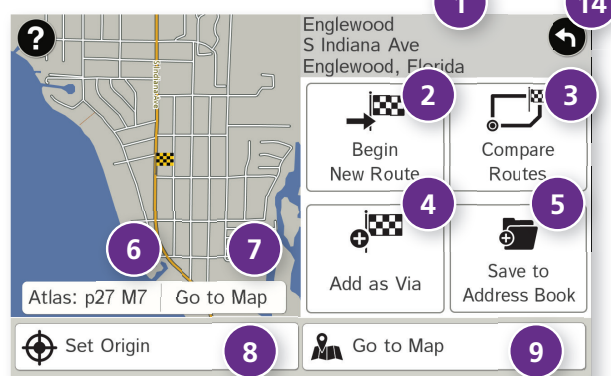

RV POI

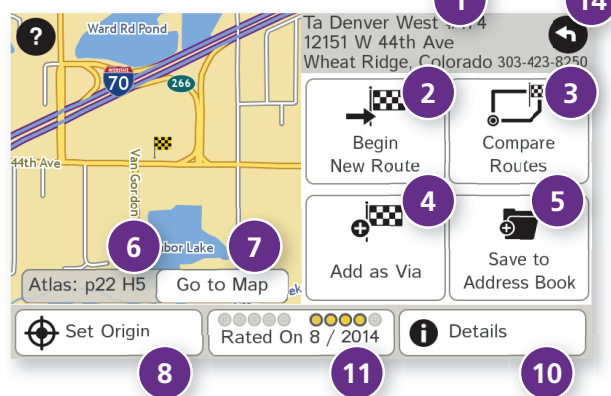


Address Book

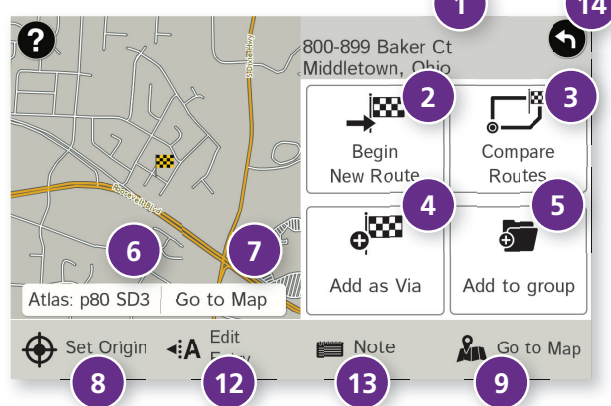

Confirmation Windows

- 1 Destination Address**
The selected location address.
- 2 Begin New Route**
Tap to route to destination.
- 3 Compare Routes**
Tap to choose between two routes.
- 4 Add as Via**
Add this location as an interim stop between the origin and destination. This automatically makes the current route a multi-stop trip.
- 5 Save to Address Book**
Add the location to the Address Book or add to Address Book group.
- 6 Atlas**
Cross-reference to printed Rand McNally *Road Atlas*.
- 7 Go to Map**
Tap to view this location on a map.
- 8 Set Origin**
Tap to set the location as the starting point of a route.
- 9 Map/Main Menu**
This is a configurable short cut. (See page 16.) Tap to return to your location or return to Main Menu.
- 10 Details**
Tap to view phone number and amenities at this location.
- 11 POI Rating**
Tap to rate or add a comment to this location.
- 12 Edit Entry**
Rename or edit this entry in the Address Book.
- 13 Note**
Add a note about this location in the Address Book.
- 14 Back**
Tap to return to previous window.

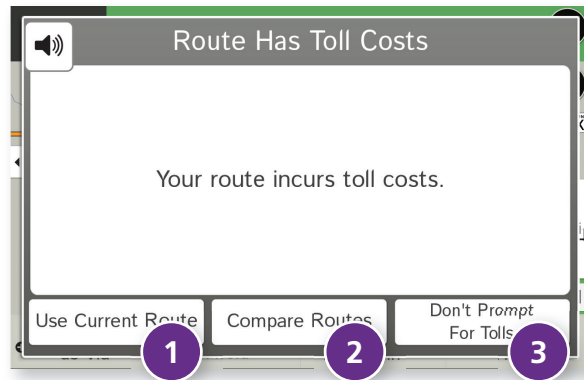

Toll Costs

From the destination confirmation screen, tap **Begin New Route**. If the calculated route includes tolls, a message appears.

- 1 Use Current Route**
Show estimated toll costs and continue along the calculated route.
- 2 Compare Routes**
Compare the calculated toll route to an alternate route without tolls. (See below.)
- 3 Don't Prompt for Tolls**
Use the current route and disable this prompt for subsequent route calculations.

Note: You can re-enable this prompt in **Preferences > General**.



Route Compare

- From the destination confirmation window, tap **Compare Routes** to calculate and display two routes and choose between them.
- Choose to ignore tolls and calculate two routes based solely on route preferences, or to calculate a primary route (which may include tolls) and an alternate route without tolls.
- The top of the screen displays the total distance and time for each route, as well as any estimated toll costs. Zoom in to get a closer look at each route on the map.
- Tap either button at the top of the screen to select that route. If the route includes tolls, estimated toll cost will display.

Route Map Window



- 1 Next Maneuver**
Tap to repeat spoken next maneuver instructions.
- 2 Road Name**
Name of street you will turn onto next.
- 3 Miles/Time**
Displays remaining distance. Tap to select from: home arrival time, arrival time, remaining time, home time, and elevation.
- 4 Exits Quick View**
Slide out to show upcoming exit information.
- 5 Directions Slide-Out List**
Tap to select a route display option.
- 6 Zoom In/Zoom Out**
- 7 Main Menu**
- 8 Compass Direction**
Tap to change the map display. An icon in the upper right corner displays the selected option: North up (N), heading up (arrow), or 3D (3).

- 9 Current Mile Marker**
Tap to open a "Tell Rand" message.
- 10 Current Information**
View current information by city, street, or upcoming intersection. Also displays advanced lane guidance and weather overlay key, when enabled. Tap to change. (**Note:** For some destinations, the "Am I close?" feature counts down addresses as the vehicle approaches.)

City, county, and state

Omaha, Douglas, NE

Current street name

I-480 W


Next intersecting street name

42nd St

Advanced lane guidance

0.6 mi



- 11 Location and Route Options**
Tap to see current location information, change route settings, detour, cancel a route, and manage avoided roads.
- 12 Current Speed**
Tap to display the Virtual Dashboard. Turns red for speed warnings.
- 13 Speed Limit**
Orange for RV limit; white for general limit. Tap to open a "Tell Rand" message about speed limits.
- 14 Map View Tab**
Tap to simplify the map screen. Icons are minimized to show simply the zoom, next maneuver, and miles/time.
- 15 Traffic**
Tap to view the Traffic window.
- 16 Mute**
- 17 Wi-Fi**
Tap to access Wi-Fi connected features: traffic, weather, fuel prices.

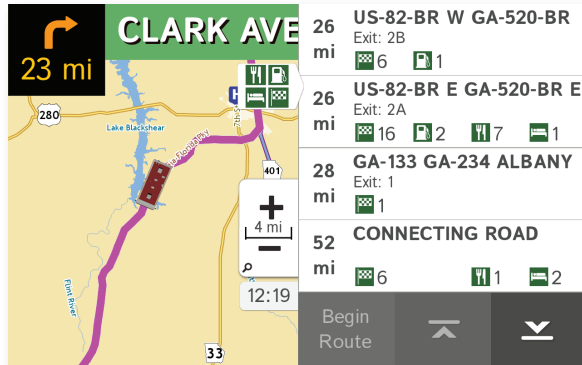


Exits Quick View

Slide out to show Points of Interest and amenities at upcoming exits. The list displays the distance to the next exit, exit name and number, and a count of available amenities.


1. Tap on an exit to bring up the list icon .
2. Tap the icon to display locations by category.
3. Tap on any item in the list to route to that location.

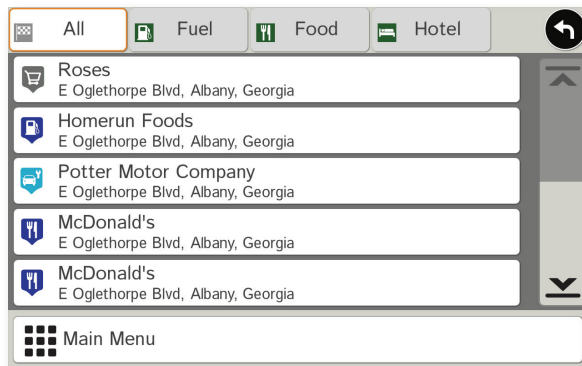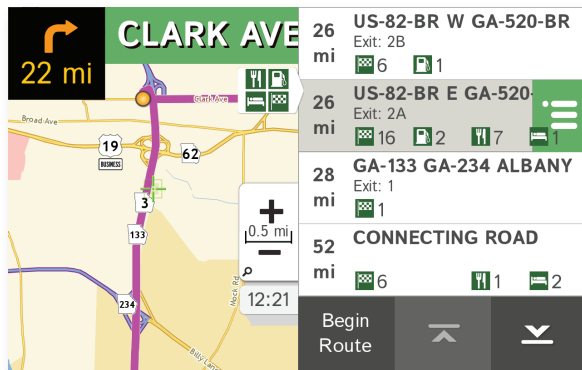


Highway View

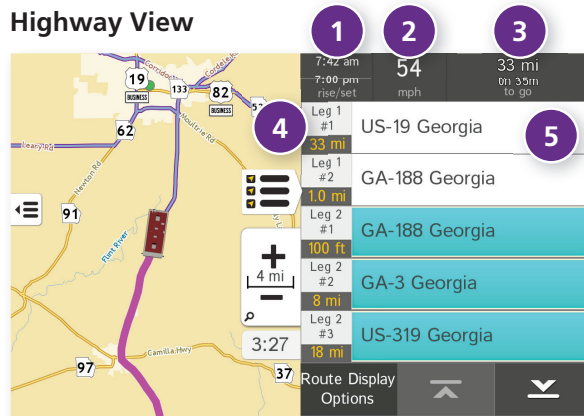

Trip Summary (for multi-stop trips)

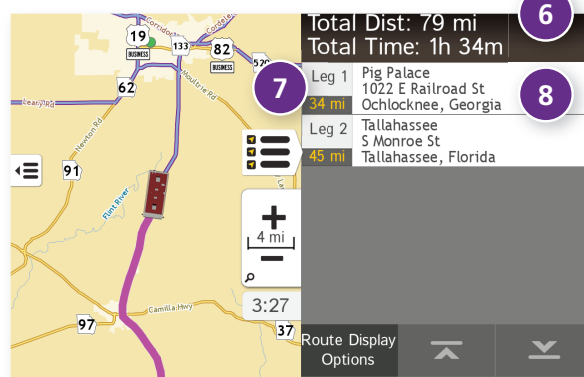

Summary Map View (entire trip)

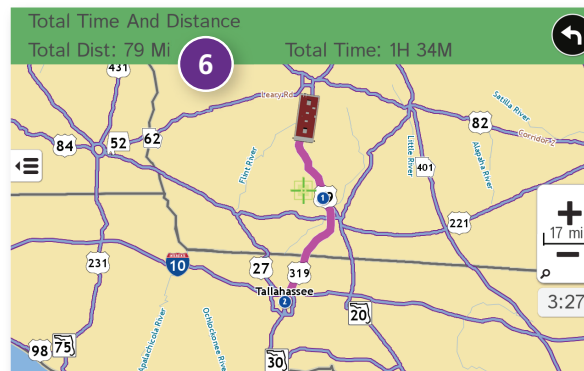

Directions Slide-Out List

Route Display Options

1. When first opened, the slide-out list displays in Detail View showing each maneuver.
2. Use  and  to view the instructions.
3. To change the display option, tap **Route Display Options**. See Highway View, Trip Summary (for multi-stop trips), and Summary Map View at left.

1 Rise/Set

Displays the times of sunrise and sunset for your current location.

2 MPH

Displays the current vehicle speed, in miles per hour.

3 Distance, Time

Displays remaining distance and time.

4 Distance

Displays the distance for each road segment.

5 Street/Road Name

Displays the street name you will be on after performing the next maneuver. Tap on any item in the list to view it on the map and to detour around it if necessary. (**Note:** For multi-stop trips, highways in each leg are listed, color-coded by segment.)

6 Total Distance and Time



Total distance and time for the entire trip.

7 Leg

Number of the leg and distance.

8 Leg Destination


Leg destination.

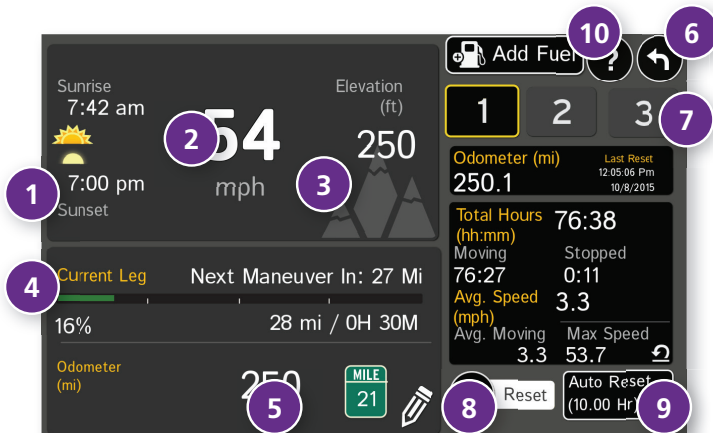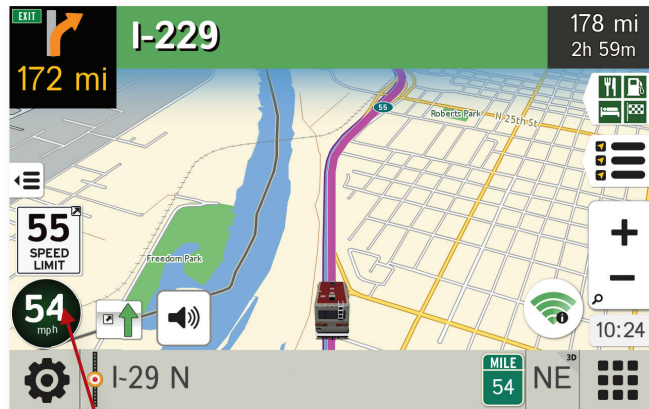

Virtual Dashboard

To show the Virtual Dashboard, tap the **Current Speed**.

- 1 Sunrise and sunset times based on vehicle location (latitude/longitude) and day.
- 2 Current speed.
Note: Turns red when speed limit warning exceeded.
- 3 Elevation at current location.
- 4 Percentage of current trip completed, distance to next maneuver, and the number of miles and time spent on the trip to this point.
- 5 Match with vehicle odometer to automatically update new fuel logs. Tap the pencil to edit.
- 6 Return to the **Route Map Window**.
- 7 Gather trip information for up to three trips. Includes odometer settings, hours, and speeds.
- 8 Reset trip information for the selected trip (**Tab 1**, **Tab 2** or **Tab 3**).
- 9 Select to automatically reset the information in each tab after the vehicle has remained stationary for the specified number of hours.
- 10 View fuel logs and add fuel purchase information.

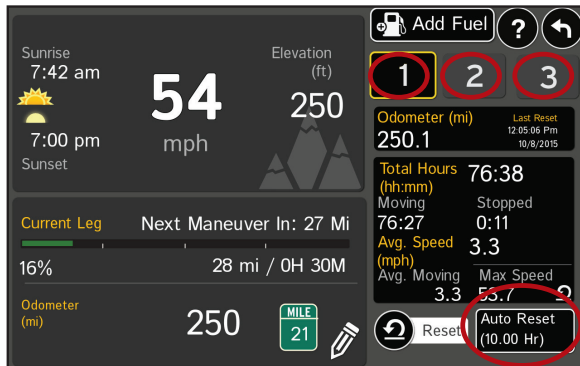


Manually Reset Trip Information

1. Tap on the tab you want to reset.
2. To set the odometer for the selected tab back to zero, tap **Reset All**.
3. Information is captured as you travel the route.

Automatically Reset Trip Information

To reset trip information after the vehicle has remained stationary after a specific number of hours:


1. Tap on the tab you want to reset.
2. Tap **Auto Reset**.
3. Tap **+** to increase the number of hours.
4. Tap **-** to decrease the number of hours.
5. To save changes, tap **Change**.
6. The Tab displays the auto reset number of hours.

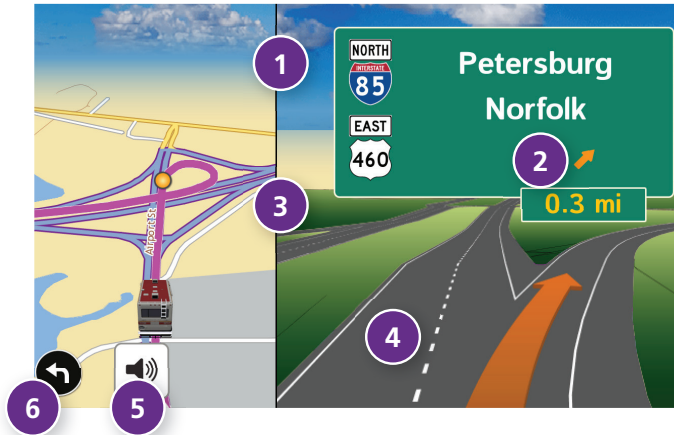

Junction View



When on a route, Junction View displays when you have an upcoming maneuver. Set distance in **Preferences > Route**. Once past the maneuver, Junction View closes and the previous window displays.

- 1 Signs to follow for the next maneuver.
- 2 Number and direction of lanes for the next maneuver.
- 3 Distance to the upcoming maneuver. Distance decreases as you approach the ramp.
- 4 Lane assist arrow.
- 5 Mute the speaker.
- 6 Return to previous window.

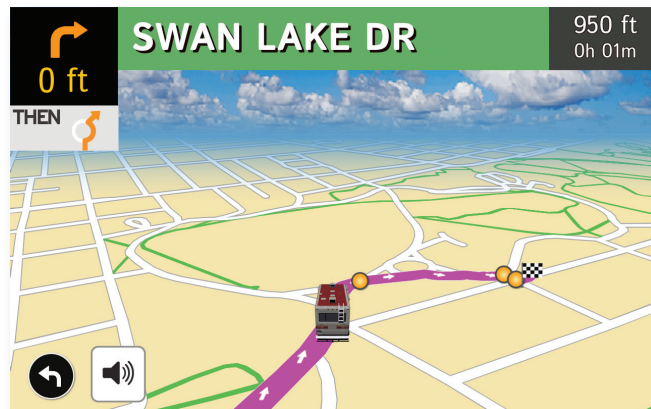

Turn View

Displays for upcoming turns. Set distance in **Preferences > Route**.

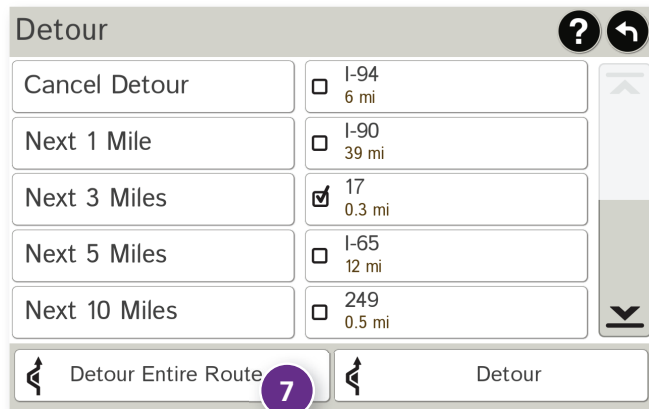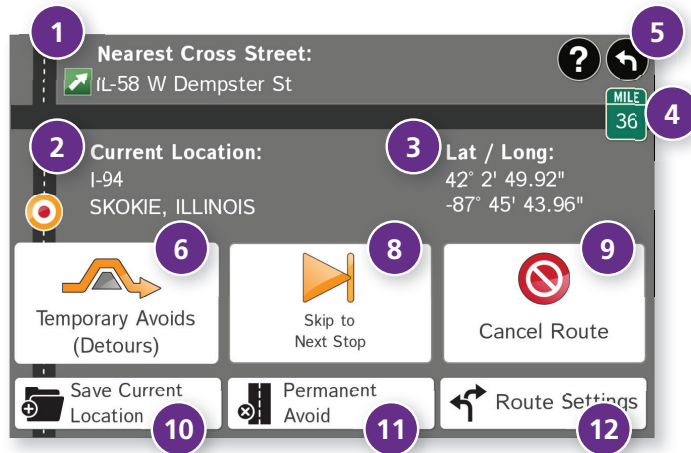

Location and Route Options

- 1 Nearest cross street
- 2 Current road you're on, current town you're in
- 3 Latitude and longitude at current location
- 4 Current location by mile marker
- 5 Return to previous window
- 6 Detour

Around Part of the Route




1. On the left side of the Window, tap the number of miles on the route to be avoided.
2. The route is recalculated.

Around a Specific Roadway

1. On the right side of the Window, tap  and  to view a list of roads in the current route.
2. Tap on one or more roadways to be avoided. A check mark  appears in front of each selected road.
3. Tap **Detour** to recalculate the route.

Note: Tap **Cancel Detour** to remove detours.

- 7 Detour the entire route and add it to the avoid list. (See page 31.)
- 8 Skip to next stop (for multi-stop trips).
- 9 Cancel current route.
- 10 Save current location to the Address Book. (See page 25.)
- 11 Access list of avoided roads. (See pages 17, 31.)
- 12 Access Route Preferences. (See page 17.)

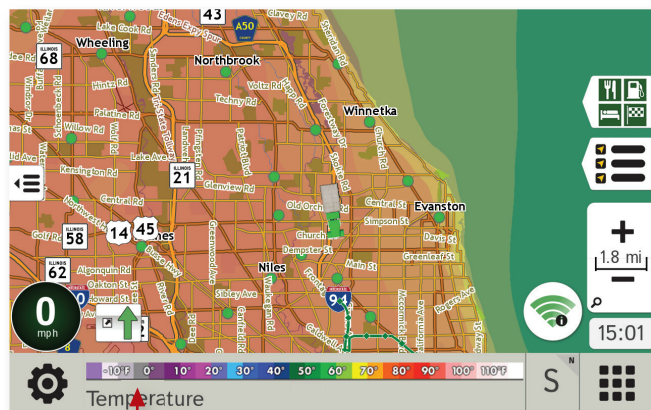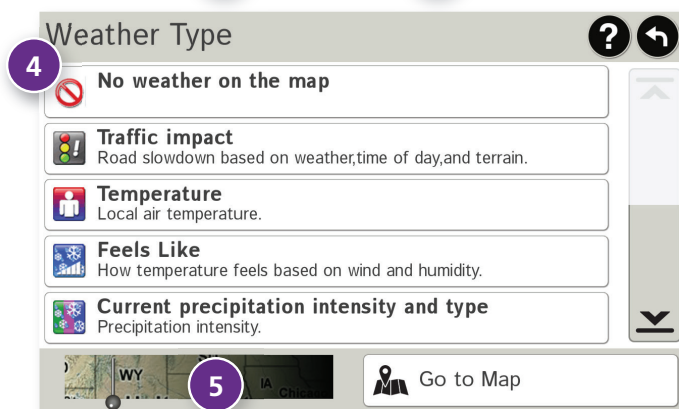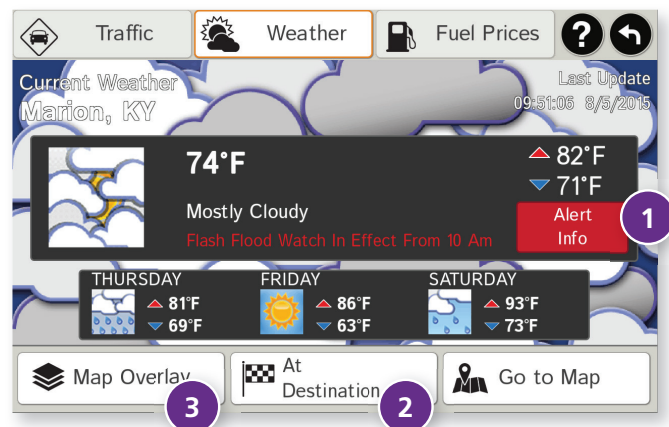

Tap to re-display city, street, or intersection.

Weather

Notes:

- This feature requires a Wi-Fi connection.
- The refresh speed of the weather display is dependent on the connection speed. Weather information is updated every few minutes while Wi-Fi connection is active.
- Weather display depends on active weather patterns and map zoom level.




To view current weather information and the three-day forecast for your location, tap the Wi-Fi icon (📶) on the map screen and tap the **Weather** tab.

- 1 View details for current weather alerts.
- 2 View weather information at your destination.

Note: You can view weather information at any other location by tapping the map and then the Wi-Fi icon and the Weather icon.

- 3 Select type of weather overlay to display on the map.
- 4 Select from a variety of weather types:
 - No weather (turn off)
 - Traffic impact
 - Temperature
 - Feels like
 - Current precipitation intensity and type
 - Probability of precipitation
 - Forecasted precipitation intensity, type, and clouds
 - Forecasted precipitation intensity and type
 - Dew point
 - Relative humidity
 - Wind speed
- 5 Slide to adjust the transparency of the overlay on the map.

Note: Use the slider to readjust for visibility when switching between day and night modes.

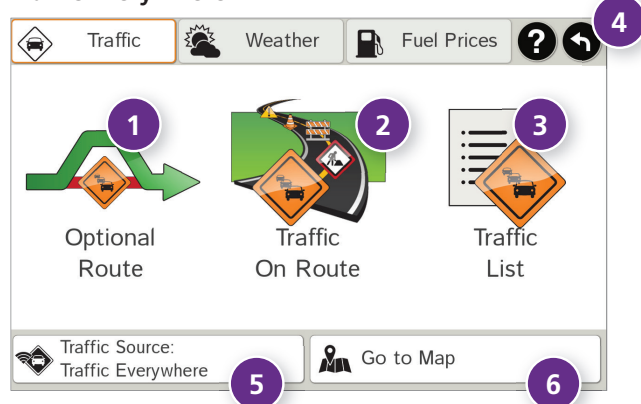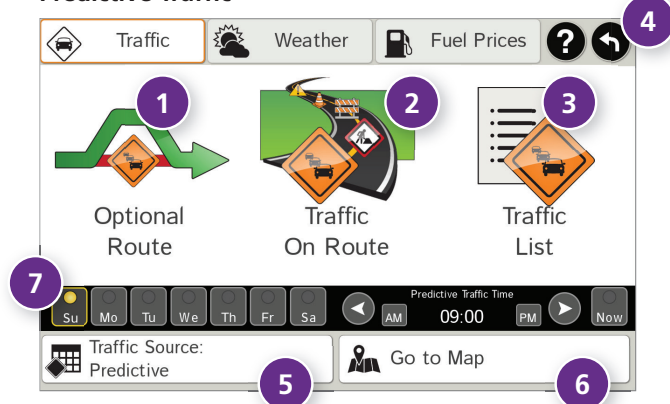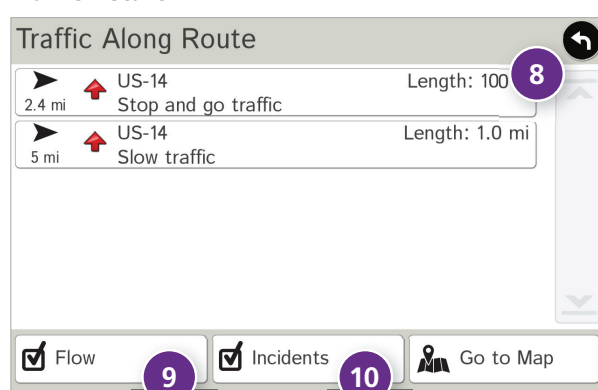Traffic Everywhere**Predictive Traffic****Traffic Details****Traffic**

Download Traffic Everywhere and Predictive Traffic in the Rand McNally Market. (See page 63.)

Note: Requires a Wi-Fi connection.

To view traffic information, tap the **Traffic** icon  on the map screen. (The icon changes with traffic conditions.) Select Traffic Everywhere for current conditions or Predictive Traffic to view typical conditions by day/time.

- 1 Optional Route**
Tap to select either a recalculated route based on traffic events or to stay on the current route.
- 2 Traffic on Route**
Tap to view traffic events along your route.
- 3 Traffic List**
Tap to view a list of traffic events in the area.
- 4 Back**
Tap to return to the previous screen.
- 5 Traffic Source**
Tap to change.
- 6 Map/Menu**
Tap to return to the map or Main Menu.
- 7 Day/Time**
Choose the day of the week. Use the arrows to set the time.
- 8 Detailed list**
Tap any item to view on the map and detour if necessary. (**Note:** You can also tap icons on the map to view details.)
- 9 Flow**
Check to display traffic flow in the list and on the map.
- 10 Incidents**
Check to display incidents in the list and on the map.

Traffic Icons



Accident



Accident



Incident



Closure



Carriageway



Exit blocked



Entrance blocked



Traffic



Carpool



Road work



Obstruction



Dangerous



Road condition



Temperature



Chance of precipitation



Wind



Activities



Security



Delay



Cancel



Travel time



Size/weight limit



Visibility





Heavy traffic



Moderate traffic



Light traffic

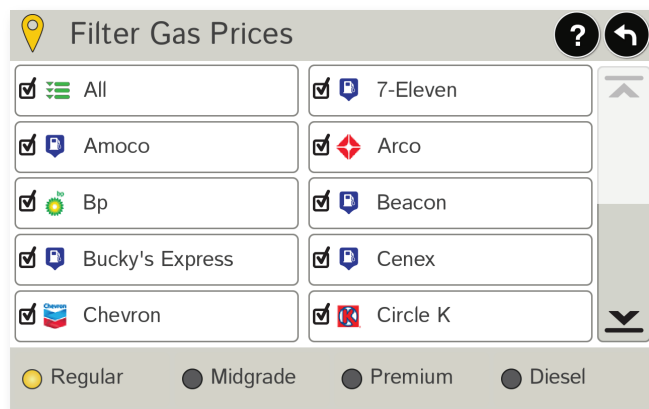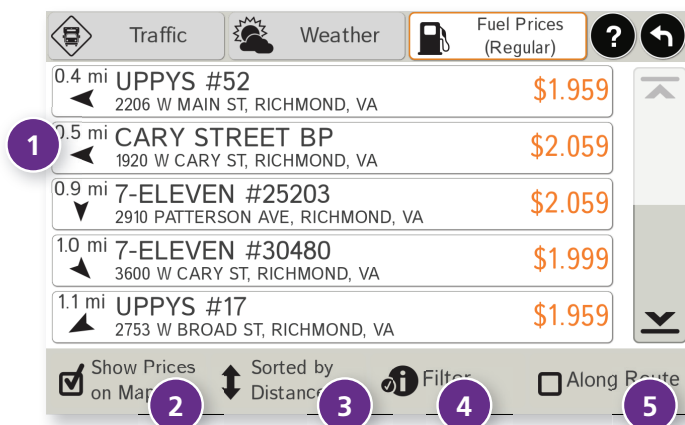


Fuel Prices

Note: This feature requires a Wi-Fi connection.

To show fuel prices, tap the Wi-Fi icon on the map screen and tap the **Fuel Prices** tab.


- 1 Displays stations and prices, with distance as the crow flies.
- 2 Check to show the icons and prices on the map screen.
- 3 Sort by distance or price.
- 4 Apply filters for type of fuel and specific brand.
- 5 Check to show fuel prices along the route.

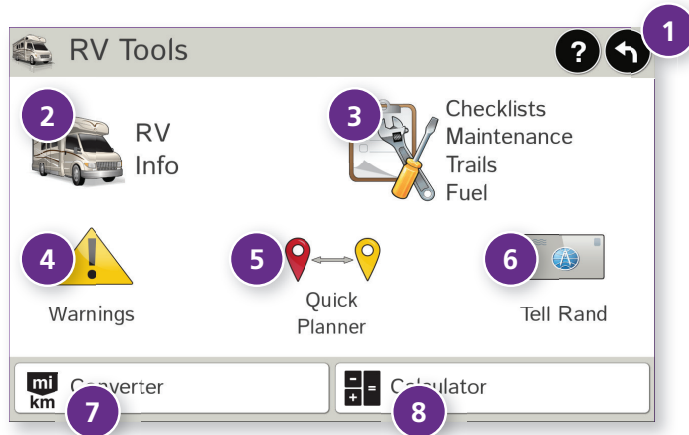

RV Tools

Note: Some features are not available in Car Mode.

- 1 **Back**
Return to the Main Menu.
- 2 **RV Info**
Enter RV information (weight, length, etc.).
- 3 **Checklists, Maintenance, Trails, and Fuel**
View trip checklists; maintenance records; trails; and fuel purchase information.
- 4 **Warnings**
Set warning distances for driving time, duty hours, and upcoming weigh stations.
- 5 **Quick Planner**
Between any two cities or towns, quickly calculate the distance, driving time, and cost.
- 6 **Tell Rand**
Compose a message to send to Rand McNally.
- 7 **Converter**
Quickly convert distance, weight, and temperature.
- 8 **Calculator**

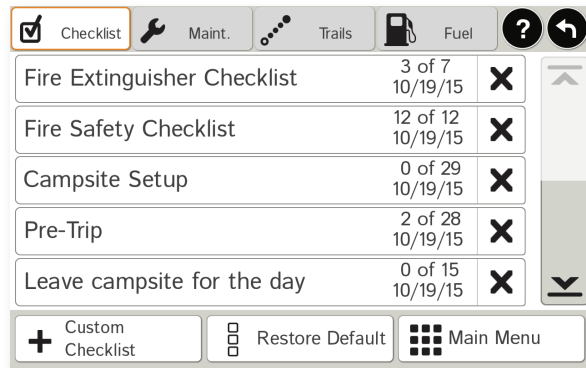

Checklists

1. Tap **RV Tools**.
2. Tap **Checklists, Maintenance, Trails, Fuel**.
3. Tap the **Checklists** tab.

To complete a preset checklist:

4. Tap on a checklist to select it.
5. Tap the box next to each task to check it off the list.


Or

To add a new checklist:

4. Tap **Custom Checklist**.
5. Enter the name of the new checklist.
6. Select the new checklist from the list.
7. Tap **Add Item** to add tasks.
8. Tap the box next to each task to check it off the list.
9. Tap Back to save changes.
10. If you have not checked off all the tasks, a warning displays.
Tap **Cancel** to continue completing tasks, **Uncheck All** to clear all checklist tasks, or **OK** to save changes.
11. The **Checklists** tab redisplay, with the number of completed tasks on the right (for example, 2 of 28).

To delete a checklist or an item from a checklist, tap **X**.

Note: If you delete preset checklists and want to restore them, tap **Restore Default**.

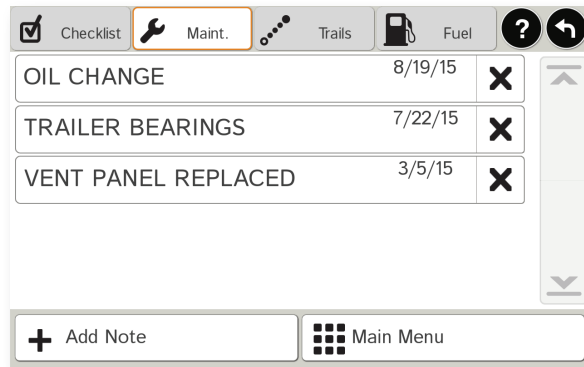


Maintenance

Keep track of maintenance performed on your RV.

1. Tap **RV Tools**.
2. Tap **Checklists, Maintenance, Trails, Fuel**.
3. Tap the **Maintenance** tab.
4. Tap **Add Note** and enter the details.
5. Tap **Back** to save changes.

Tap any note to edit or to change the date.

To delete a note, tap **X**.

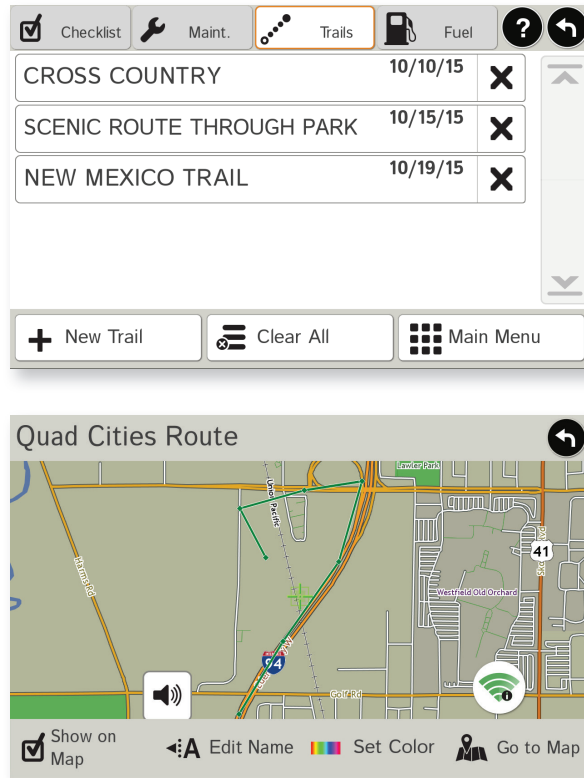

Trails

Use **Trails** to record a “bread-crum” path of GPS coordinates where your RV has traveled.

1. Tap **RV Tools**.
2. Tap **Timers, Mileage, Trails, Fuel**.
3. Tap the **Trails** tab.
4. To record a trail, tap **New Trail**.
5. To end the trail, tap the Trails icon on the map screen. 
6. The trail is recorded in the Trails tab.
7. Tap on a trail to view details.
8. Tap **Show on Map** to display the trail on the map screen.
9. Tap **Edit Name** to change the name of the trail.
10. Tap **Set Color** to change the color of the trail.

Note: The **Trails** feature is also accessible from the Address Book. (See page 25.)


Edit Fuel Log


Date 7/31/2014	LOCATION SKOKIE, IL	Station WOODS DR
Total Cost \$448.07	Fuel Quantity 115.780 gal	Fuel Price \$3.870 / gal
Last Odometer 18095 mi	Current Odometer 18816 mi	Distance 721 mi

Current Economy: 6.2 MPG Average Economy: 6.2 MPG


 Save

Fuel Logs

1. Tap **RV Tools**.
2. Tap **Timers, Mileage, Trails, Fuel**.
3. Tap the **Fuel** tab to view a list of fuel logs by quarter.
4. Tap **Add Fuel** to record the date, location and cost of fuel purchase.
5. Tap on any field to edit.
6. Tap **Save** (**Note:** Fuel economy is calculated automatically.)
7. Once fuel purchases have been entered, tap on a quarter to view the details.
8. You can **View by State** or **View by Month**.
9. Tap the state or month to view fuel purchases.
10. Tap **View All** to see all fuel purchases.

Quick Planner

From City 1

Chicago, IL

To City 2

Englewood, FL

Distance:

1280 mi (approx.)

Driving Time:

23h 16m

Cost Per Mile:

\$0.55

Total:

\$704.00

Avg. Speed (MPH)



55

Go to Map

Quick Planner

Use this tool to quickly estimate the mileage and time between any two cities or towns.


1. Tap **RV Tools**.
2. Tap **Quick Planner**.
The revenue or cost per mile used in the last computation displays.
3. Tap **From City 1** and select the city.
4. Tap **To City 2** and select the city.
5. The distance displays.
6. Tap **Cost per Mile** and enter the per mile rate or tap **Total** and enter the total amount.
7. Tap the new dollar amount and tap **Enter**.
8. The dollar amounts readjust automatically.
9. Tap **Average Speed (MPH)** enter a speed:
 - Tap **–** or **+** to decrease or increase the speed.
 - Tap the calculator to enter a speed.
10. Tap **Change**.
11. The driving time displays.

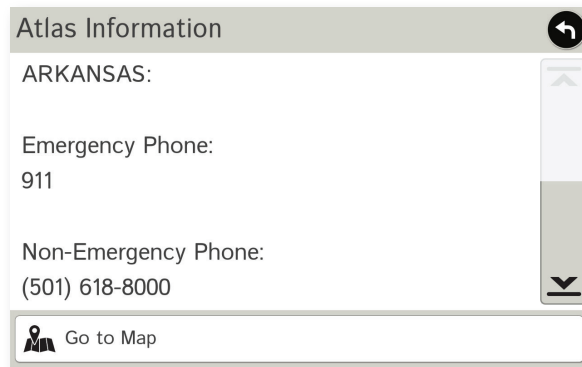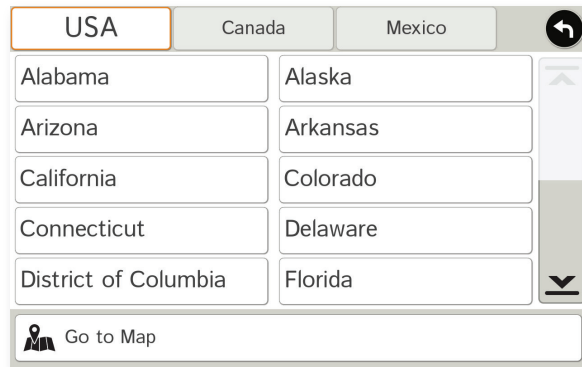

Road Atlas Information

To reference the Rand McNally *Road Atlas*:

1. Tap **RV Tools**.
2. Tap **Road Atlas Information**.
3. Select the appropriate country tab.
4. Select the appropriate state/province to view emergency and other key phone numbers.

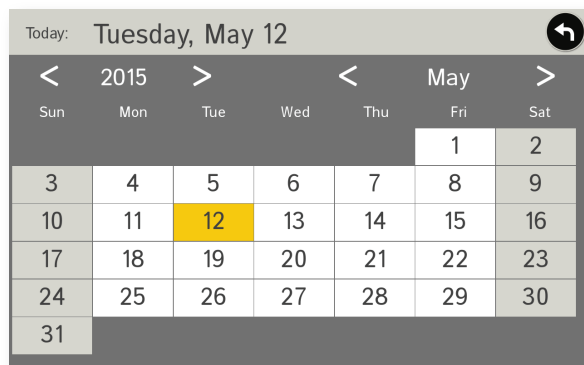


Calendar

1. Tap **RV Tools**.
2. Tap **Calendar**.
3. Use the arrows to view other months and years.
4. Tap **Today** to return to the current date.

Notepad

1. Tap **RV Tools**.
2. Tap **Notepad**.
3. Tap **New Note**.
4. Tap a note in the list to view and edit.

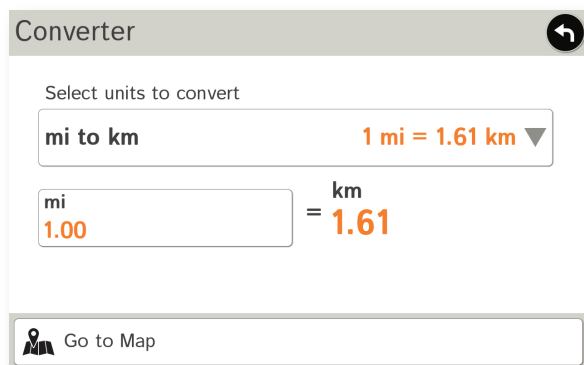

Unit Converter

5. Tap **RV Tools**.
6. Tap **Converter**.
7. Tap on the first field and select the type of conversion to perform.
8. Tap on the second field and enter the value to be converted.
9. Tap **Enter**.

Calculator

1. Tap **RV Tools**.
2. Tap **Calculator**.

Tell Rand McNally About

☒ Current Location	Speed Limit Correction
☐ Enter Different Location	Add/Remove Location/Address
☐ Find Location on Map	Road Change/New Road
I-90 Chicago, Illinois	Construction Info Correction

 Go to Map

Long term road construction missing or incorrect near I-90, CHICAGO, ILLINOIS.

CLR  Enter


1	2	3	4	5	6	7	8	9	0
Q	W	E	R	T	Y	U	I	O	P
A	S	D	F	G	H	J	K	L	
abc	Z	X	C	V	B	N	M	SPC	x

Tell Rand

Enter messages for Rand McNally regarding construction, RV restrictions, addresses, your device, and more.

1. Tap **RV Tools**.
2. Tap **Tell Rand**. On the left side, tap **Current Location**. Enter **Different Location** or **Find Location on Map**.

Note: You can open a Tell Rand speed limit message by tapping the speed limit or mile marker on the map screen.
3. If you selected Enter Different Location, enter it as an address. If you selected Find Location on Map, tap on the map to set the crosshairs at that location, then tap **Back**.
4. On the right side, tap the type of message you want to send.
5. Type your message.
6. Tap **Enter** to save the message.
7. To discard the message and return to the previous window, tap **Back**.
8. To send the message, be sure your device is connected to the Internet.

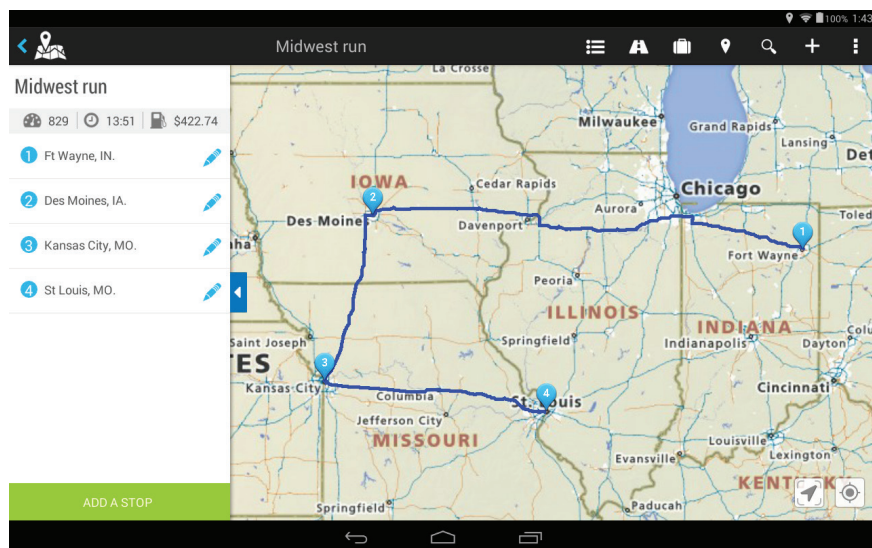


TripMaker is a trip planning app that allows you to easily browse the map and set up a multi-stop trip. Add via points and send your trip to the RV GPS app for RV-friendly routing.


Please note that TripMaker does not provide RV-specific routing.

View Help in the TripMaker app to learn more.

A digital version of Rand McNally's *Road Atlas*.

Tap **Atlas Maps** at the top right to select pages by state.

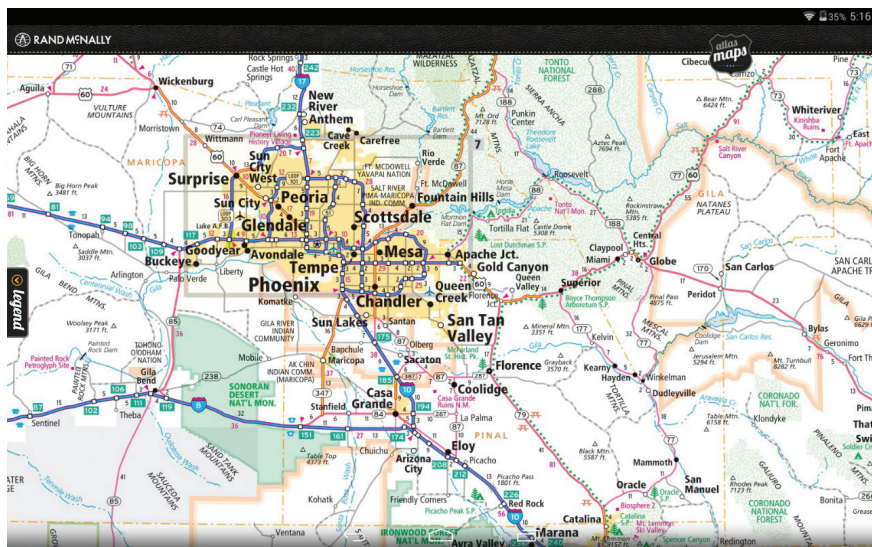

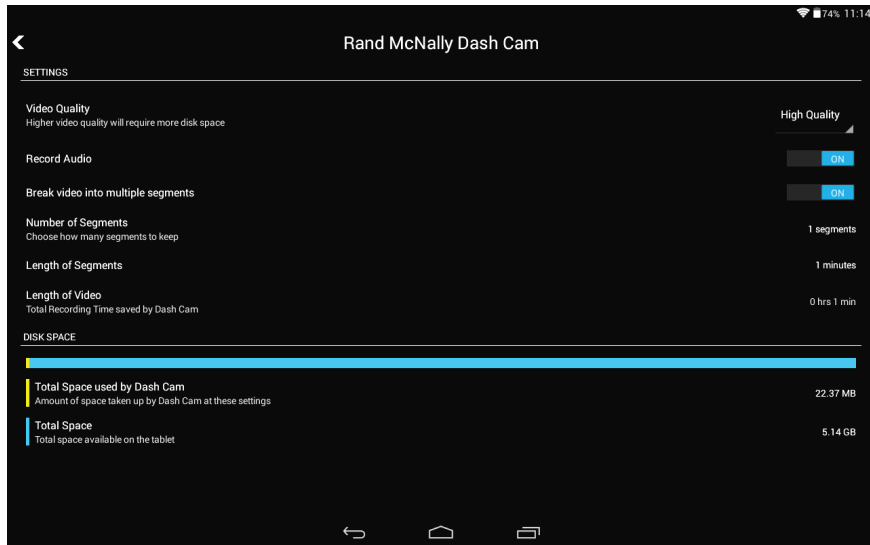

Records a video loop as you drive. Tap the red button to record again to stop.

Tap the menu icon at the top right to access preferences for video quality, audio, and segments.

7. Preloaded Apps

Your RV Tablet 80 comes preloaded with apps available from our partners. For support, view help within each app.



RV Park Reviews



RV Spot



RV Trader

Additional apps are available for download in the Rand McNally Market.
Look for these complimentary apps:

- **Backup cam** (requires accessory)
- **Predictive Traffic** (add to RV GPS app)
- **Rand McNally Motor Carriers' Road Atlas**
- **Traffic Everywhere** (add to RV GPS app)

Register to receive information and updates from Rand McNally.



Rand McNally Market

For more information

- Rand McNally Website
www.randmcnally.com/rvgps
- Support
www.randmcnally.com/support
- GPS accessories
store.randmcnally.com
- Facebook
www.facebook.com/randmcnally

Trademarks

Rand McNally and the Rand McNally logo are registered trademarks of RM Acquisition LLC, d/b/a Rand McNally.

The RVer's Friend is a registered trademark of TR Information Publishers.

Good Sam is a registered trademark of Good Sam Enterprises, LLC.

Wi-Fi is a registered trademark of the Wi-Fi Alliance.

InfoGation is a registered trademark of InfoGation Corporation.

Local search information provided by CityGrid Media.

Weather data provided by myweather.com.

Fuel prices provided by OPIS.

Traffic information provided by INRIX, Inc.

© 2015 Rand McNally. © 2015 HERE. All rights reserved.

Rand McNally follows a continuous improvement process and reserves the right to provide enhancements that may not be reflected in the pictures and specifications in this manual.

The information contained herein may be changed at any time without prior notification. Neither this manual nor any parts thereof may be reproduced for any purpose whatsoever without the express written consent of Rand McNally, Inc., nor may it be transmitted in any form either electronically or mechanically, including photocopying, and recording. All technical specifications, drawings, etc. are subject to copyright law.

